


## Installation and replacement of the batteries

1. Slide the cover to the left to open.
2. Install the batteries in accordance with the +/- sign.
3. Reverse this process to close the cover.

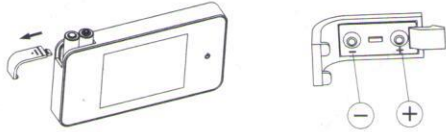


### Operation:

1. Power Button:  
Touch and release the power button, then the unit will continue working for the next 10 seconds.
2. Low power indicator:  
When the batteries are running low, a red battery shape indicator will appear on the screen. Please change batteries when this indicator appears.

### Specification:


Fits any door: 38-110mm (1.50"-4.33") thick  
Fits any barrel hole: 14-22mm  
Sensor: 0.3 Mega Pixel CMOS  
LCD screen: 2.6" TFT  
Power source: 2 AAA Batteries  
Size: 110(W)x59(H)x14(D)mm  
Weight: 100g

## Digital Door Viewer User Manual

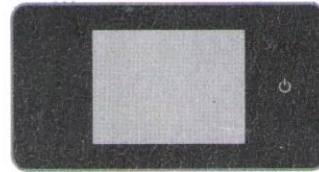

## Attention :


1. Please read the instruction manual before use.
2. DO NOT disassemble the camera or the mainbody.
3. Handle with care.
4. Please unscrew from the bottom of the digital door viewer, take out the holding plate and take off the plastic cover on it and prepare to install.

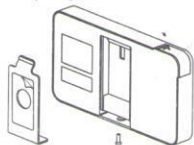

## Battery:

Dispose of used batteries appropriately, DO NOT bury or burn the batteries and keep them away from children. DO NOT swallow. DO NOT re-charge or disassemble the batteries.

## Package Contents:

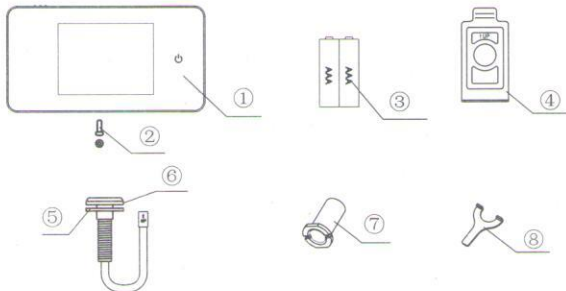




- |                       |                     |
|-----------------------|---------------------|
| ① Digital door viewer | ② Locking bolt 1 pc |
| ③ 2 AAA batteries     | ④ Holding plate     |
| ⑤ Washer              | ⑥ Camera            |
| ⑦ Locking barrel      | ⑧ Tightening tool   |

## Before installation:

Prior to mounting the peephole viewer, please make sure you have installed the batteries included.


## Installation:

1. Replace the existing door viewer or drill a 14mm hole in the door at eye level. Insert the camera from the outside while inserting the washer between the back of the lens and the door. Make sure that the arrow mark on front of the camera points upwards. (FIG. 1)
2. Fit the holding plate over the end of the lens then screw the locking barrel on to the threaded part of the camera and tighten (a tightening tool is provided), this will hold the plate to the door. Make sure that the arrow on the plate points upwards. (FIG. 2)
3. The data wire should be fully plugged in at the back of the screen; excess wire should be gently placed into the groove at the back of the screen.
4. Hook the digital door viewer over the bracket at the top of the locking plate and secure the digital door viewer case with the locking bolt. (FIG. 3)

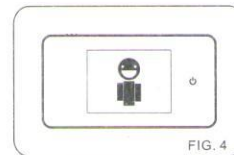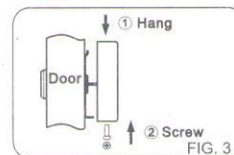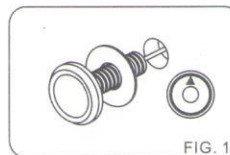

## WARNING

Make sure you assemble the door bell camera carefully  
DO NOT pull or fold the camera wire. If the camera wire is pulled or folded, this could damage the product.

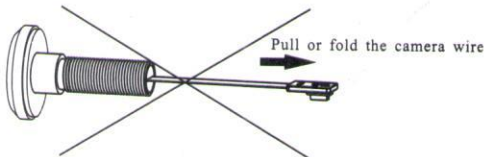


When fitting the door viewer camera, first unscrew the camera barrel and insert the door viewer camera into the peephole with the arrow points up. After the camera is well positioned, screw up the locking barrel from inside door. DO NOT rotate the camera from outside door, this could damage the camera. Also DO NOT rotate camera when disassembling this product.

### Correct Assembly



Do not rotate the out door camera when assembling

### Incorrect Assembly

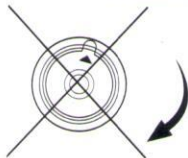

Rotate the out door camera when assembling