

Instructions for Installation of the Door Closers (Standard Type)

● Determine the installation position of the door closer place the templet on the closed door and the top jamb, and make holes in them with a punch or other proper tools

① Templet

● Fix the link shoe to the top jamb.
● Fit the lever to the pinion shaft and fix it firmly with the screw.
● Mount the closer on the door

① Link shoe ③ Lever
② Door closer ④ Mounting screw

LINK ARM MUST BE SET 90° TO FRAME WITH DOOR CLOSER


● Adjust the link length so that the link makes a right angle with the top jamb, and fix with the lock nut.
● FIX PINION CAP TO CLOSER BODY

FAST SLOW

No.1 CLOSING
No.2 LATCHING

● Adjust the closing speed.
The door closer closes the door at two different speeds.
The first speed can be controlled by the No.1 speed adjusting valve, and the second speed, by the No.2 speed adjusting valve.

① CLOSING ② LATCHING

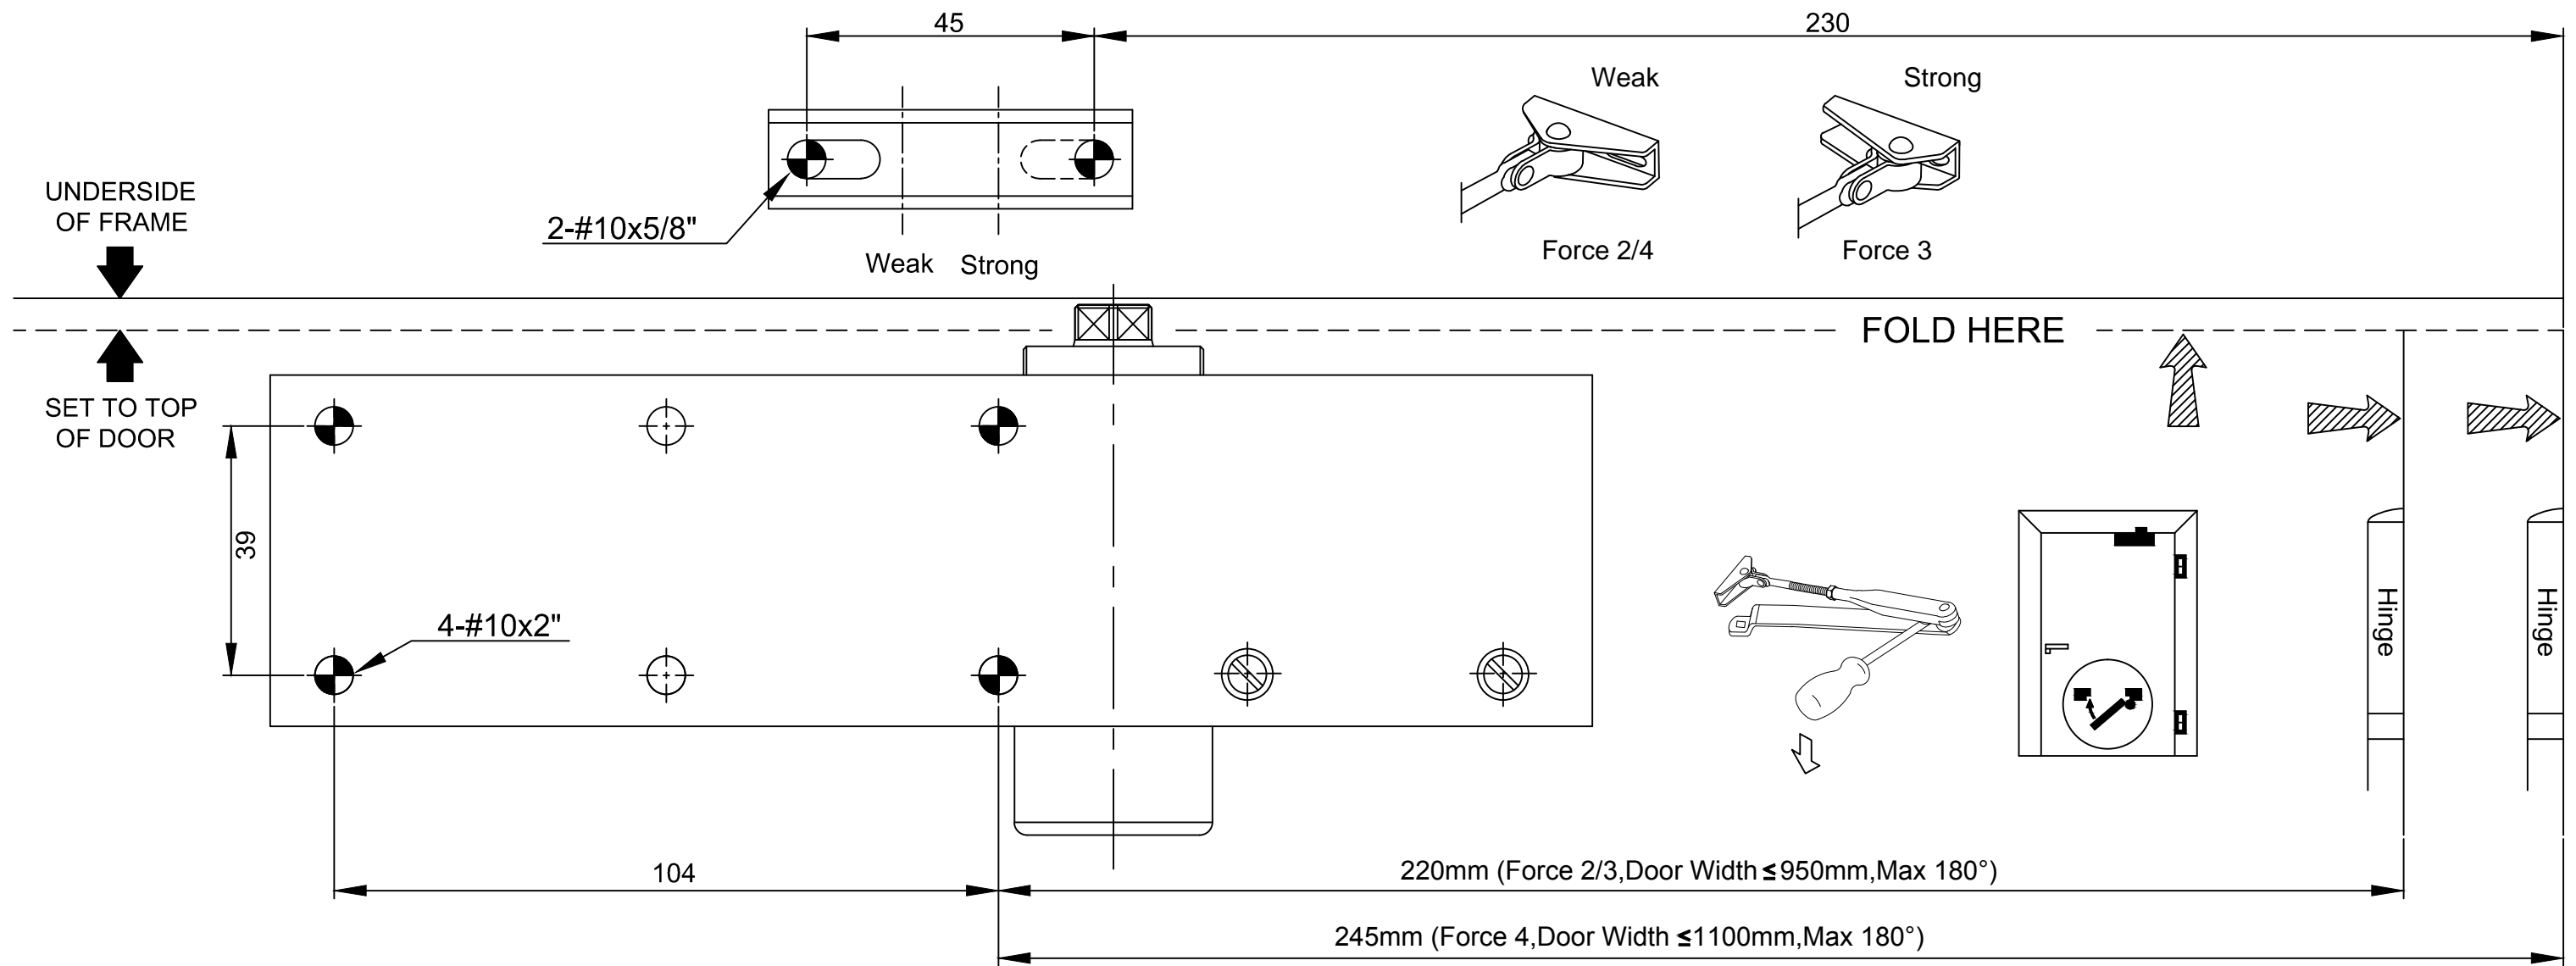

Instructions for Installation of the Door Closers (Standard Type)

No.1 CLOSING
No.2 LATCHING

FAST SLOW

① CLOSING ② LATCHING

- Adjust the closing speed. The door closer closes the door at two different speeds. The first speed can be controlled by the No.1 speed adjusting valve, and the second speed, by the No.2 speed adjusting valve.

LINK ARM MUST BE SET 90° TO FRAME WITH DOOR CLOSER

90°

- Adjust the link length so that the link makes a right angle with the top jamb, and fix with the lock nut.
- FIX PINION CAP TO CLOSER BODY

- Fix the link shoe to the top jamb.
- Fit the lever to the pinion shaft and fix it firmly with the screw.
- Mount the closer on the door

① Link shoe
② Door closer ③ Lever
④ Mounting screw

- Determine the installation position of the door closer place the templet on the closed door and the top jamb, and make holes in them with a punch or other proper tools

① Templet