


# INSTALLATION GUIDE


## AXIS Intrusion Switch B




AXIS Q3505-V

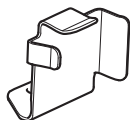


1x

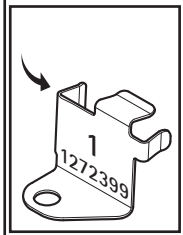


AXIS Q3505-VE  
AXIS P33-VE

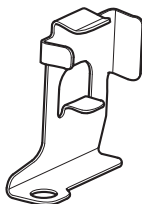


1x

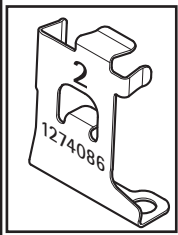

1x

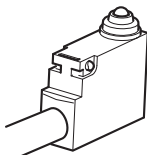

1x

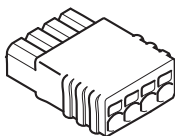


1x




1x


AXIS Q3505-V

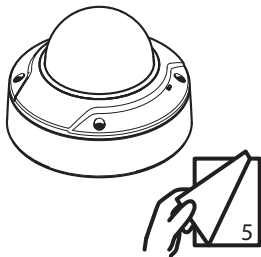


AXIS Q3505-VE

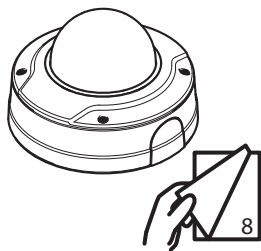


AXIS P33-VE

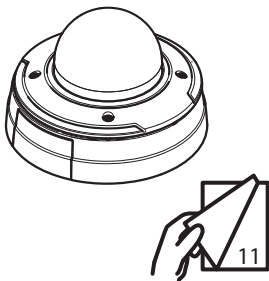



1 AXIS Q3505-V

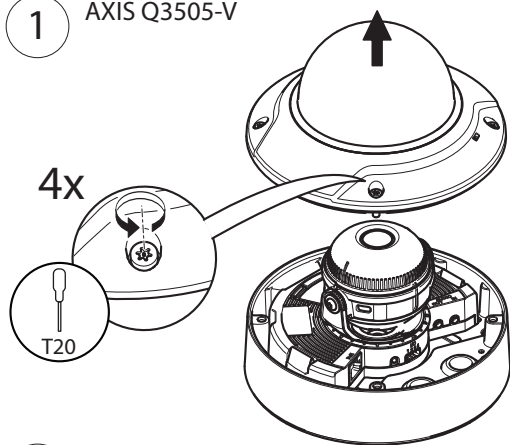





2

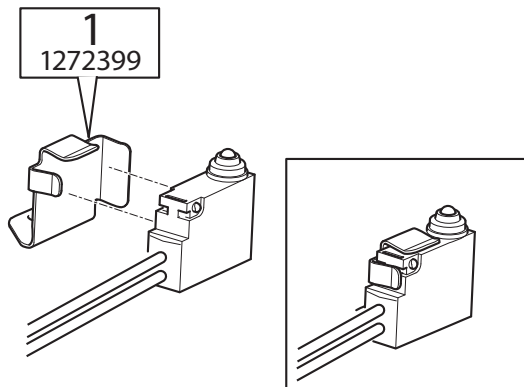


3

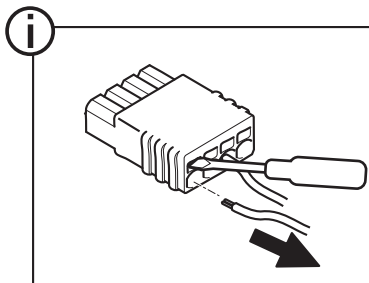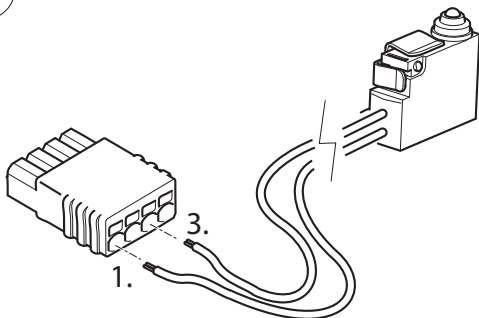


4

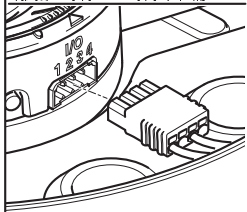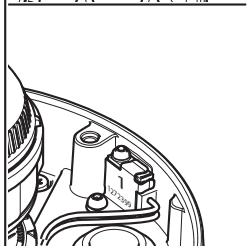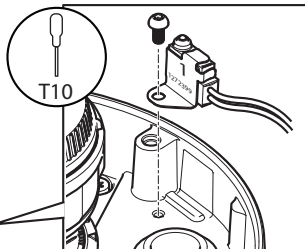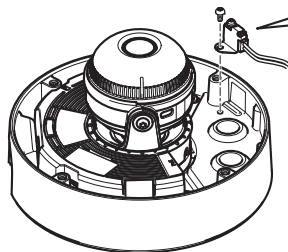

4x


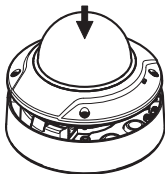


1 AXIS Q3505-VE

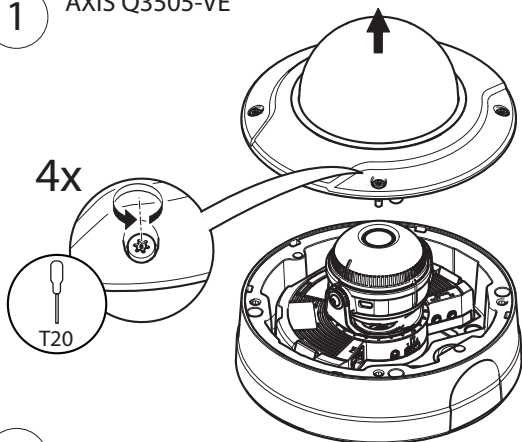



2

2  
1274086



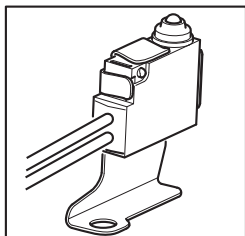
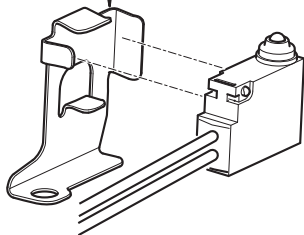





3

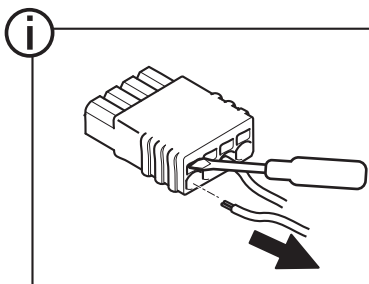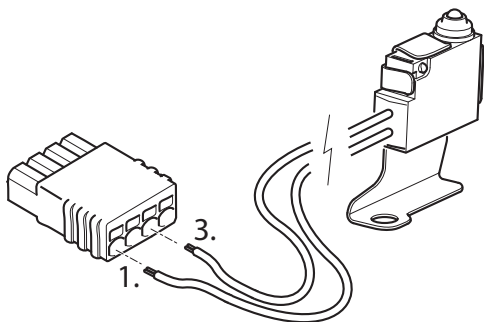

4

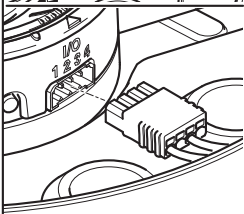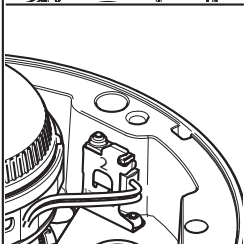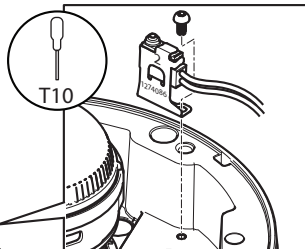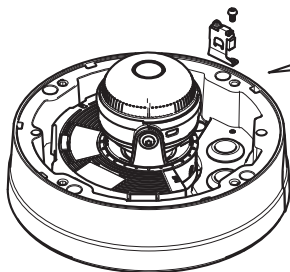


4x

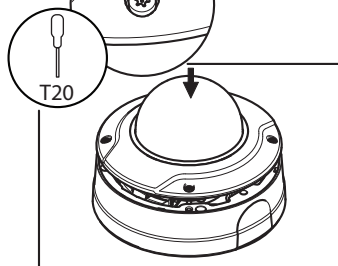



1 AXIS P33-VE




4x


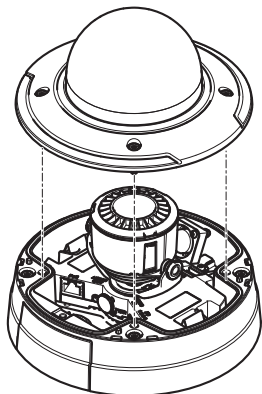


2

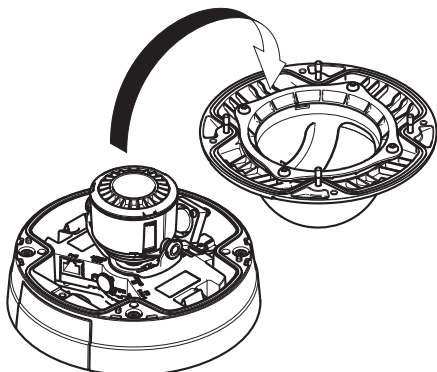


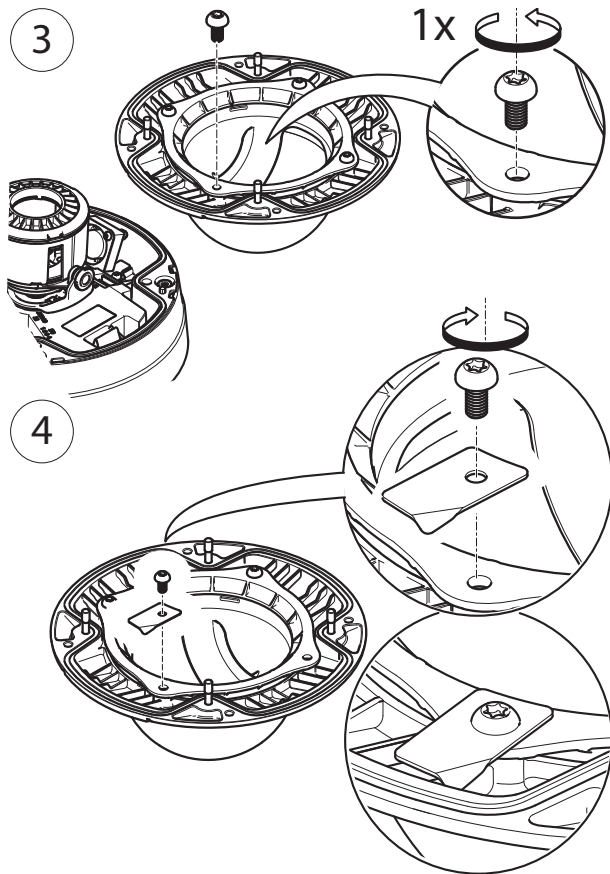

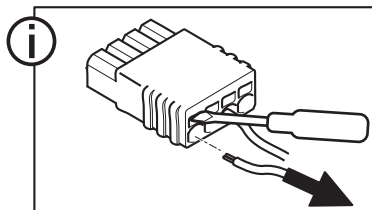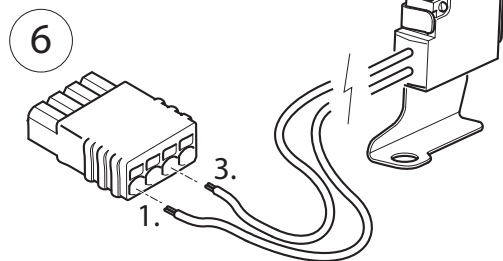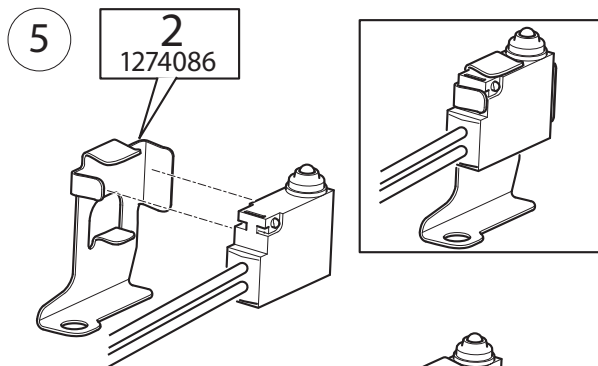


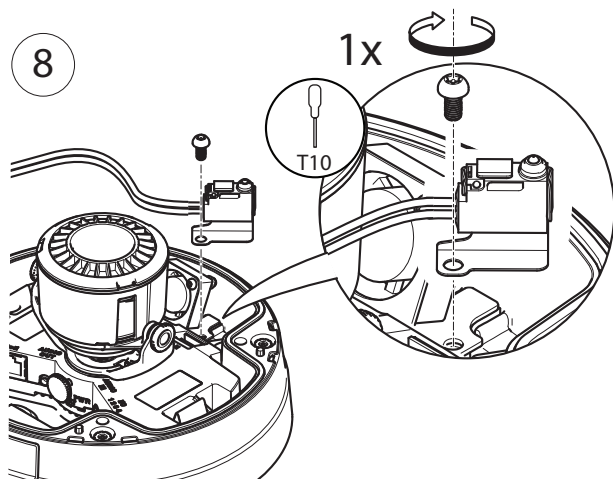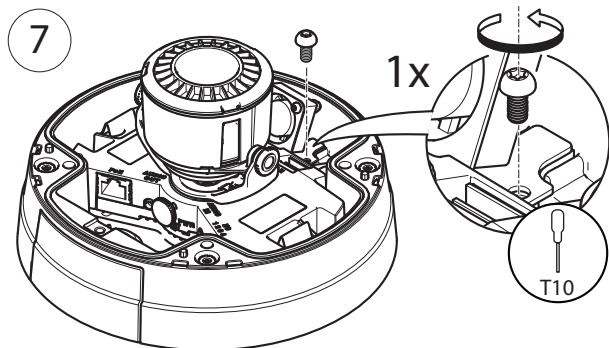


9

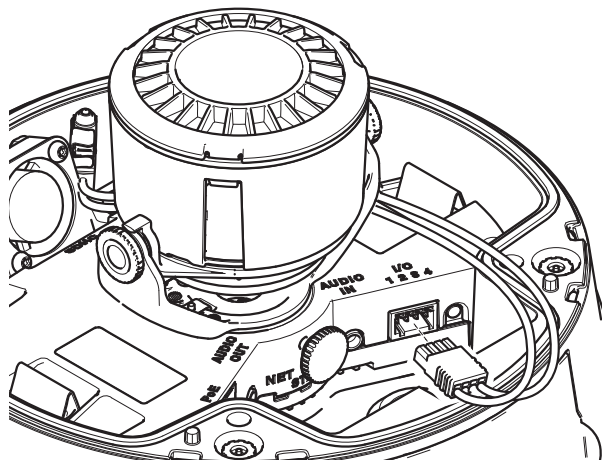

10

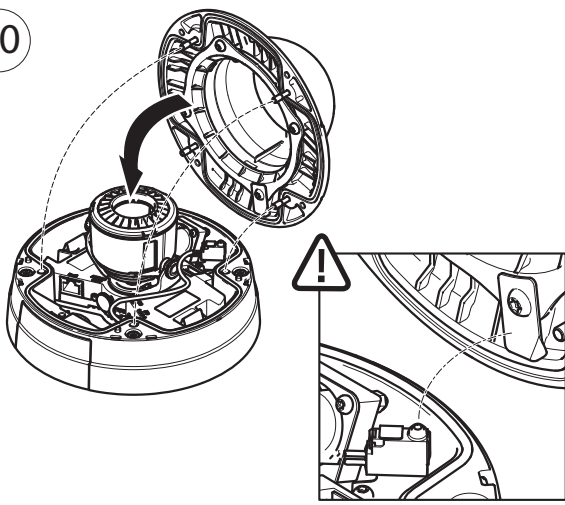

11

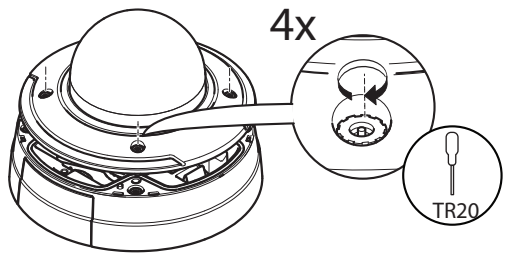





Installation Guide

Ver.2.0

AXIS Intrusion Switch B

Printed: November 2014

© Axis Communications AB, 2014

Part No.60654