

## **COBRA - SINGLE MOTOR WINCH WORKSHOP MANUAL WITH DRAWINGS**

EET 1: FRONT COVER ET 2: DIMENSIONS ET 3: FUNCTIONS

ET 4: MOUNTING OPTIONS ET 5: EXPLODED VIEW EET 6: ELECTRICAL SETUP

SHEET 7: PARTS LIST SHEET 8: LUBRICATION

This winch is part of a group of winches whose designs have undergone extensive testing. The end user can now enjoy a professional highly engineered high performance electric winch capable of operating in the most demanding of situations. The small compact size combined with its pulling power make it an ideal winch for maximum impact when faced with minimal installation space.





TITLE **REDWINCH COBRA - WORKSHOP MANUAL** 


Telephone: +44 (0)1460 67744 sales@red-winches.com **RED** Winches www.red-winches.com ULTIMATE PERFORMANCE PRODUCTS


COBRA-MANUAL-01


Drawing not to be reproduced or distributed in any format or method without specific per

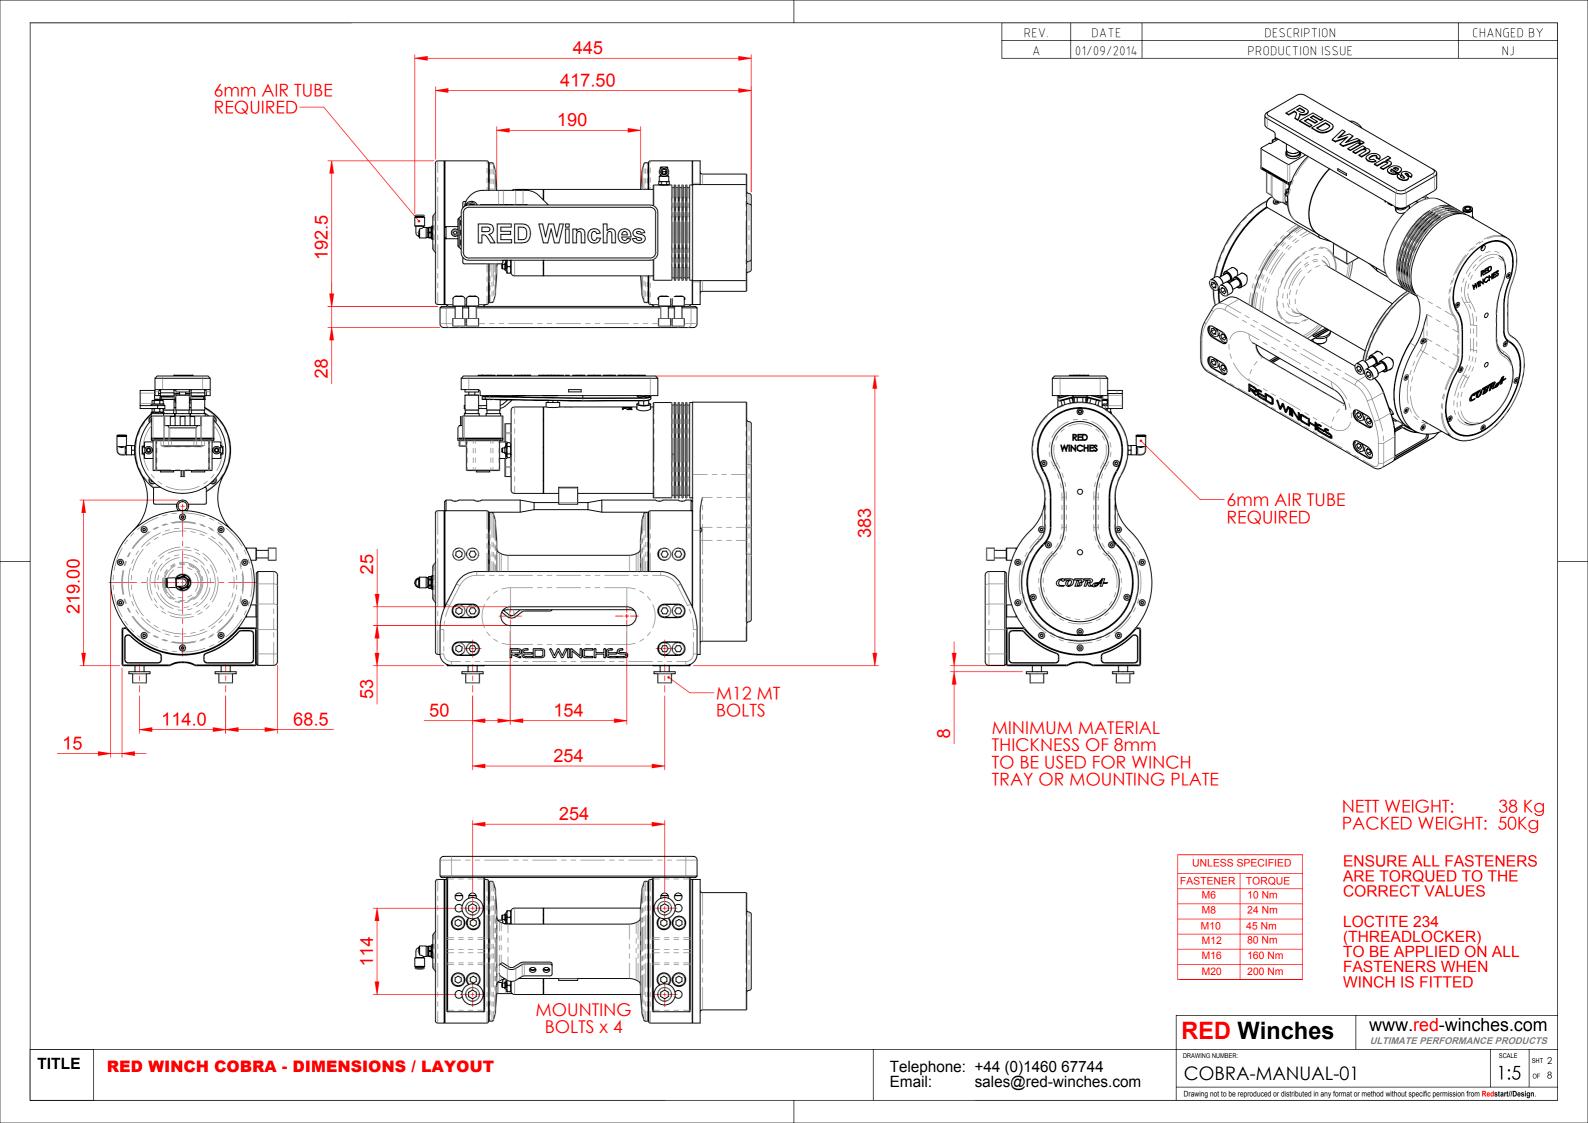

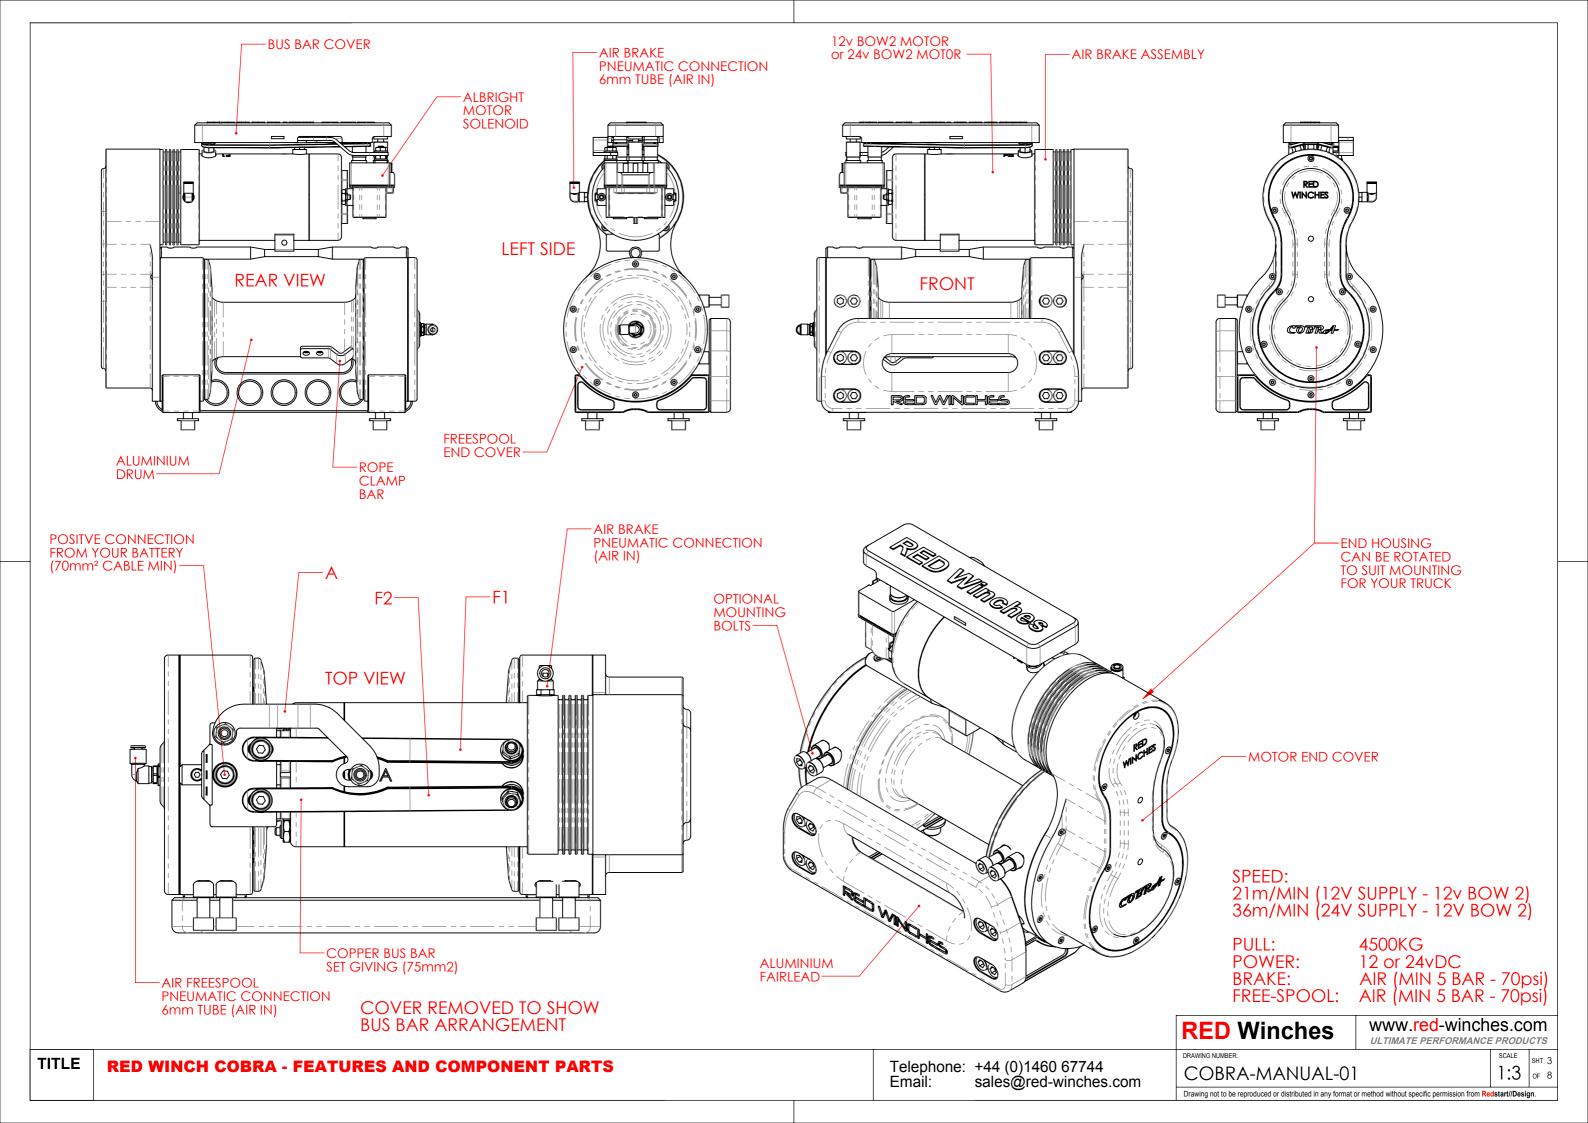

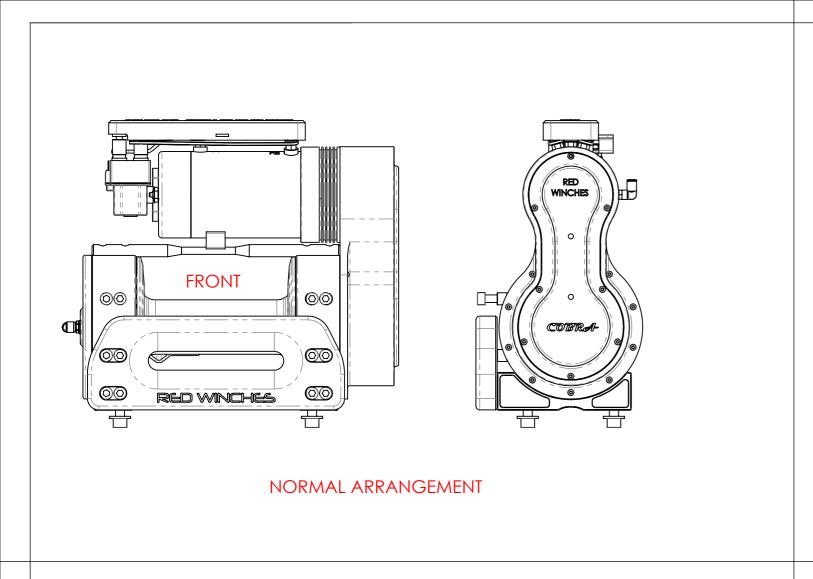

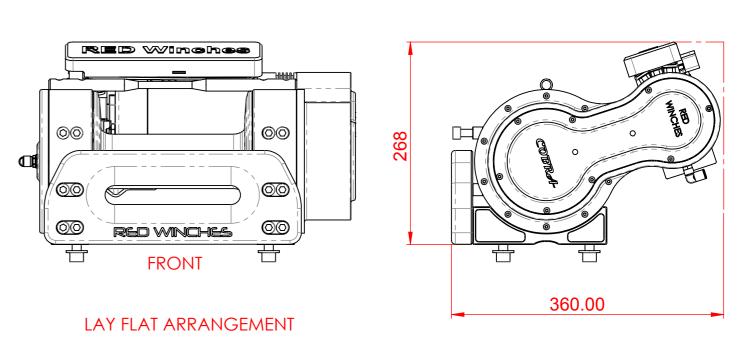

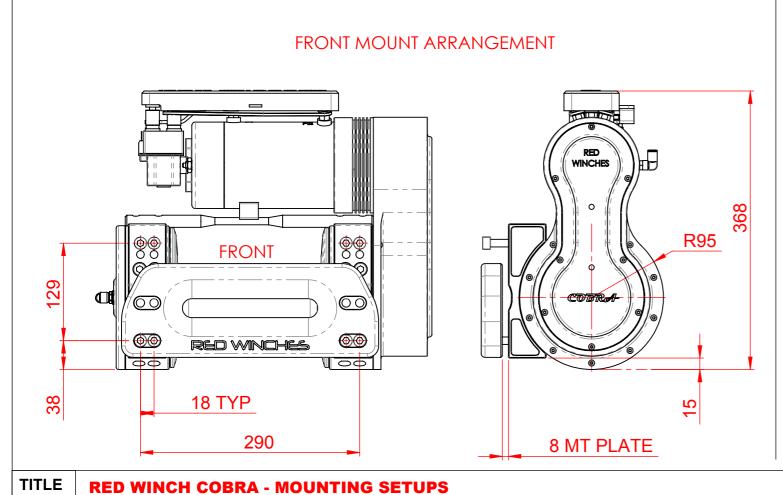

RED Winches

WWW.red-winches.com


ULTIMATE PERFORMANCE PRODUCTS

DRAWING NUMBER:

COBRA-MANUAL-01


Drawing not to be reproduced or distributed in any format or method without specific permission from Redstart//Design.

Telephone: +44 (0)1460 67744 Email: sales@red-winches.com

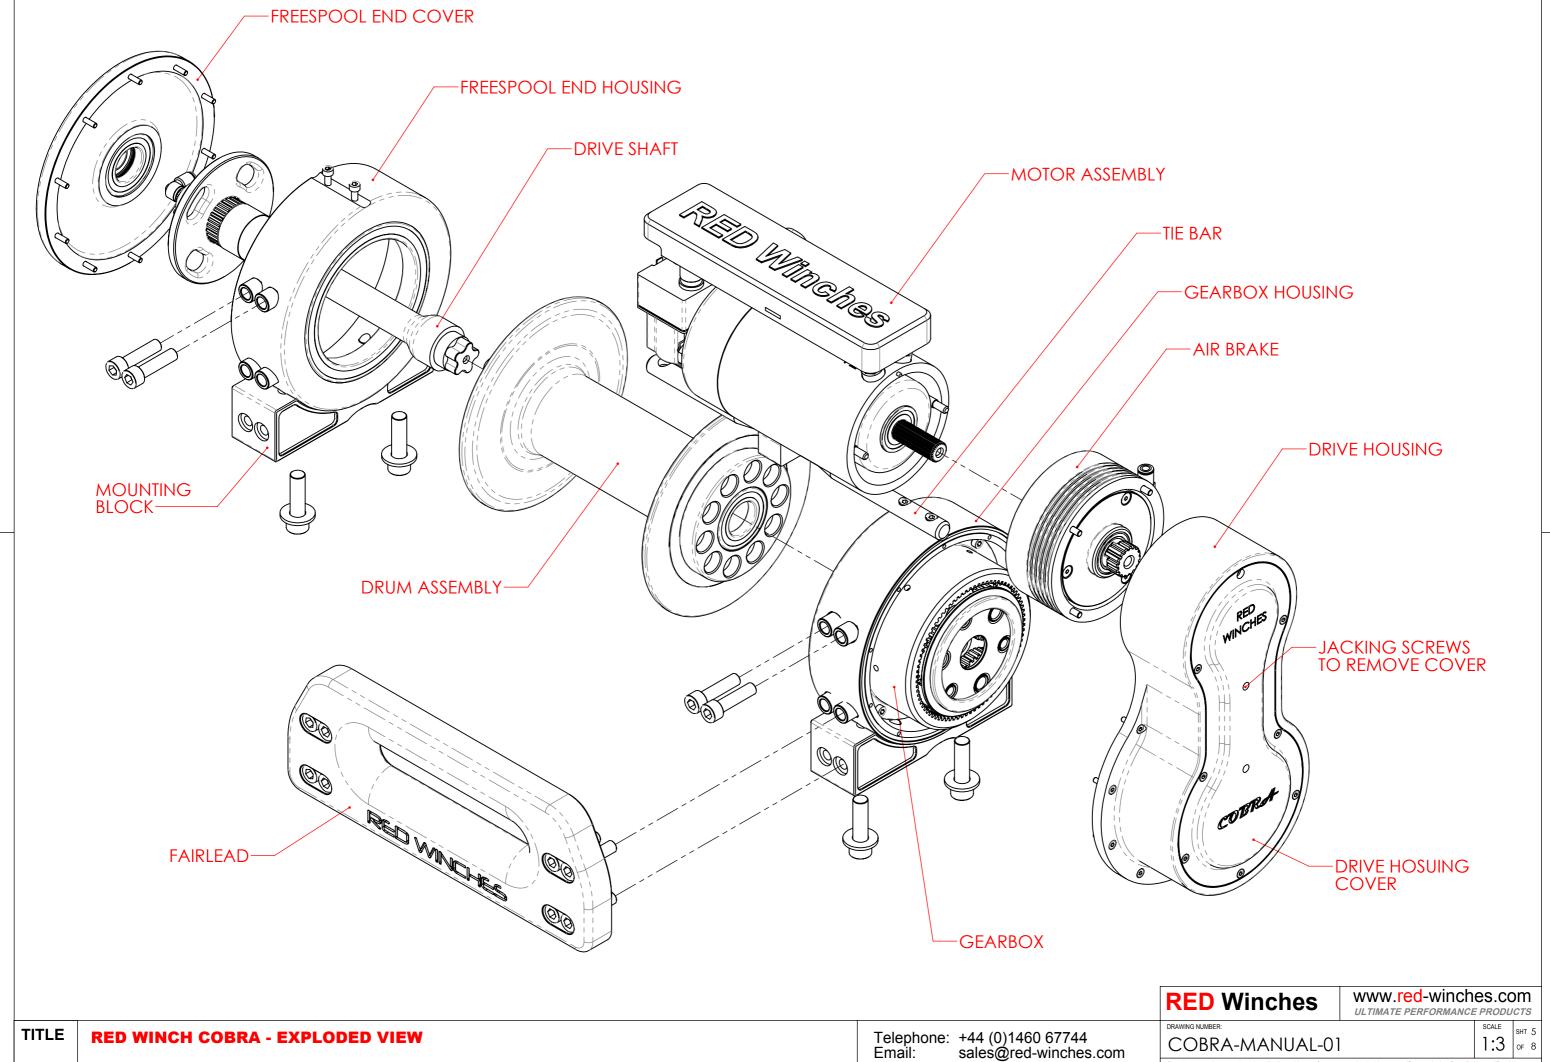


COBRA-MANUAL-01

Drawing not to be reproduced or distributed in any format or method without specific permission from Redstart//Design.

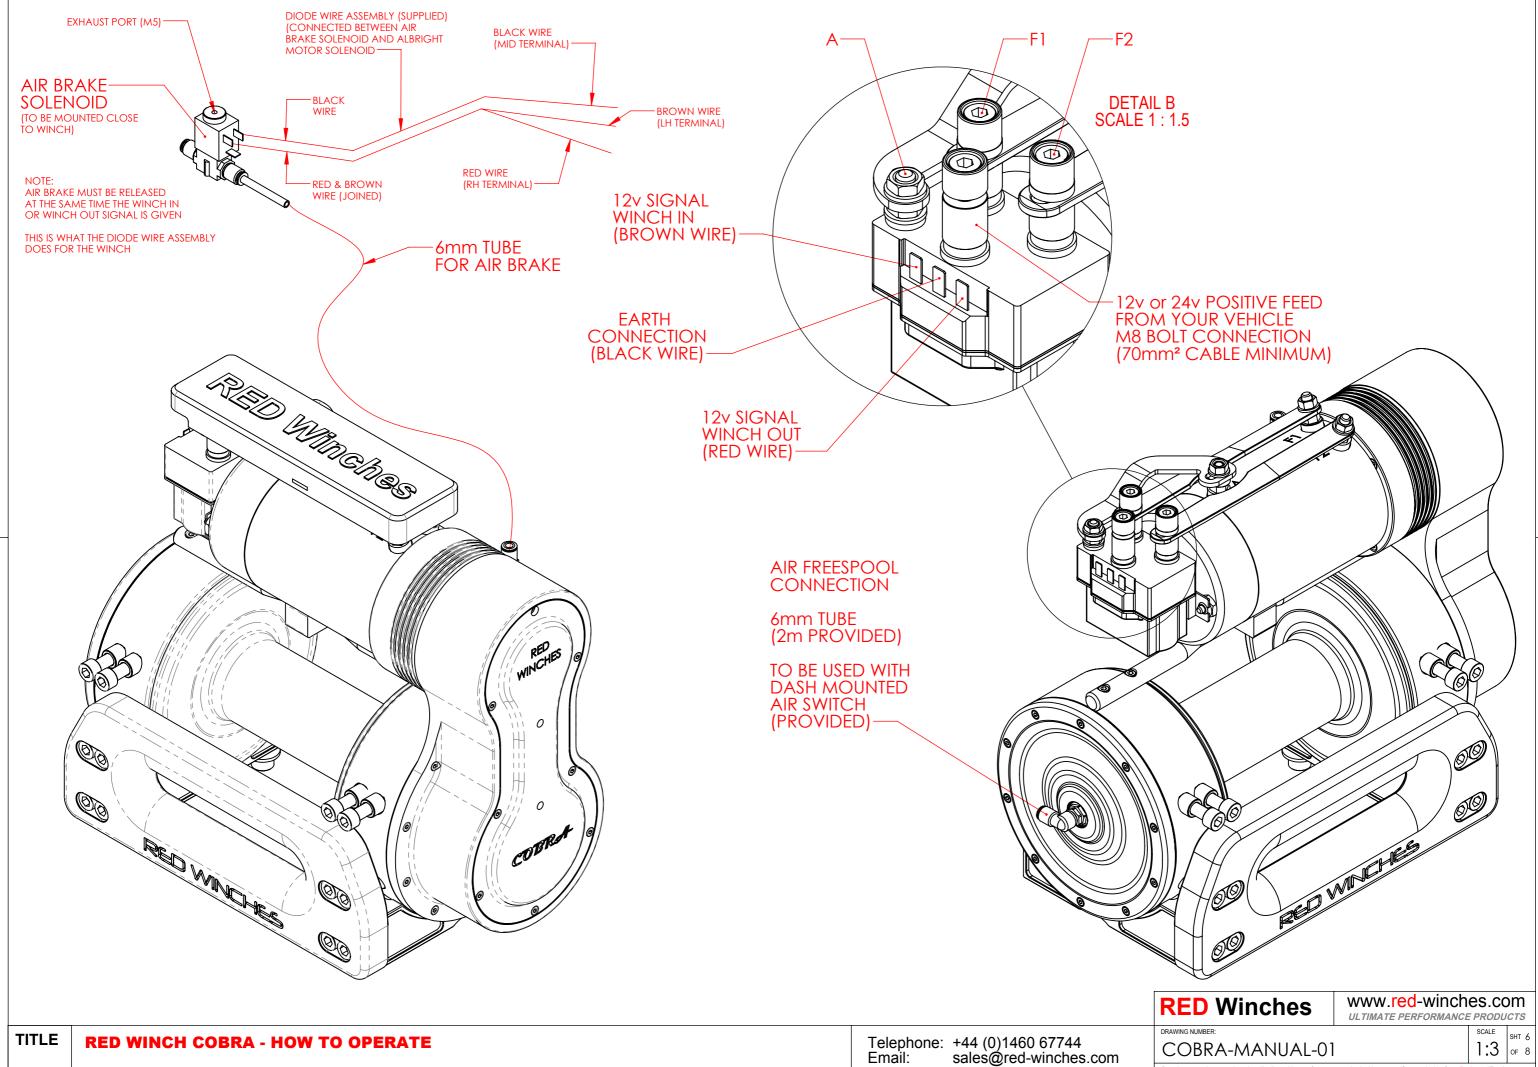

Drawing not to be reproduced or distributed in any format or method without specific permission from Redstart//Design.

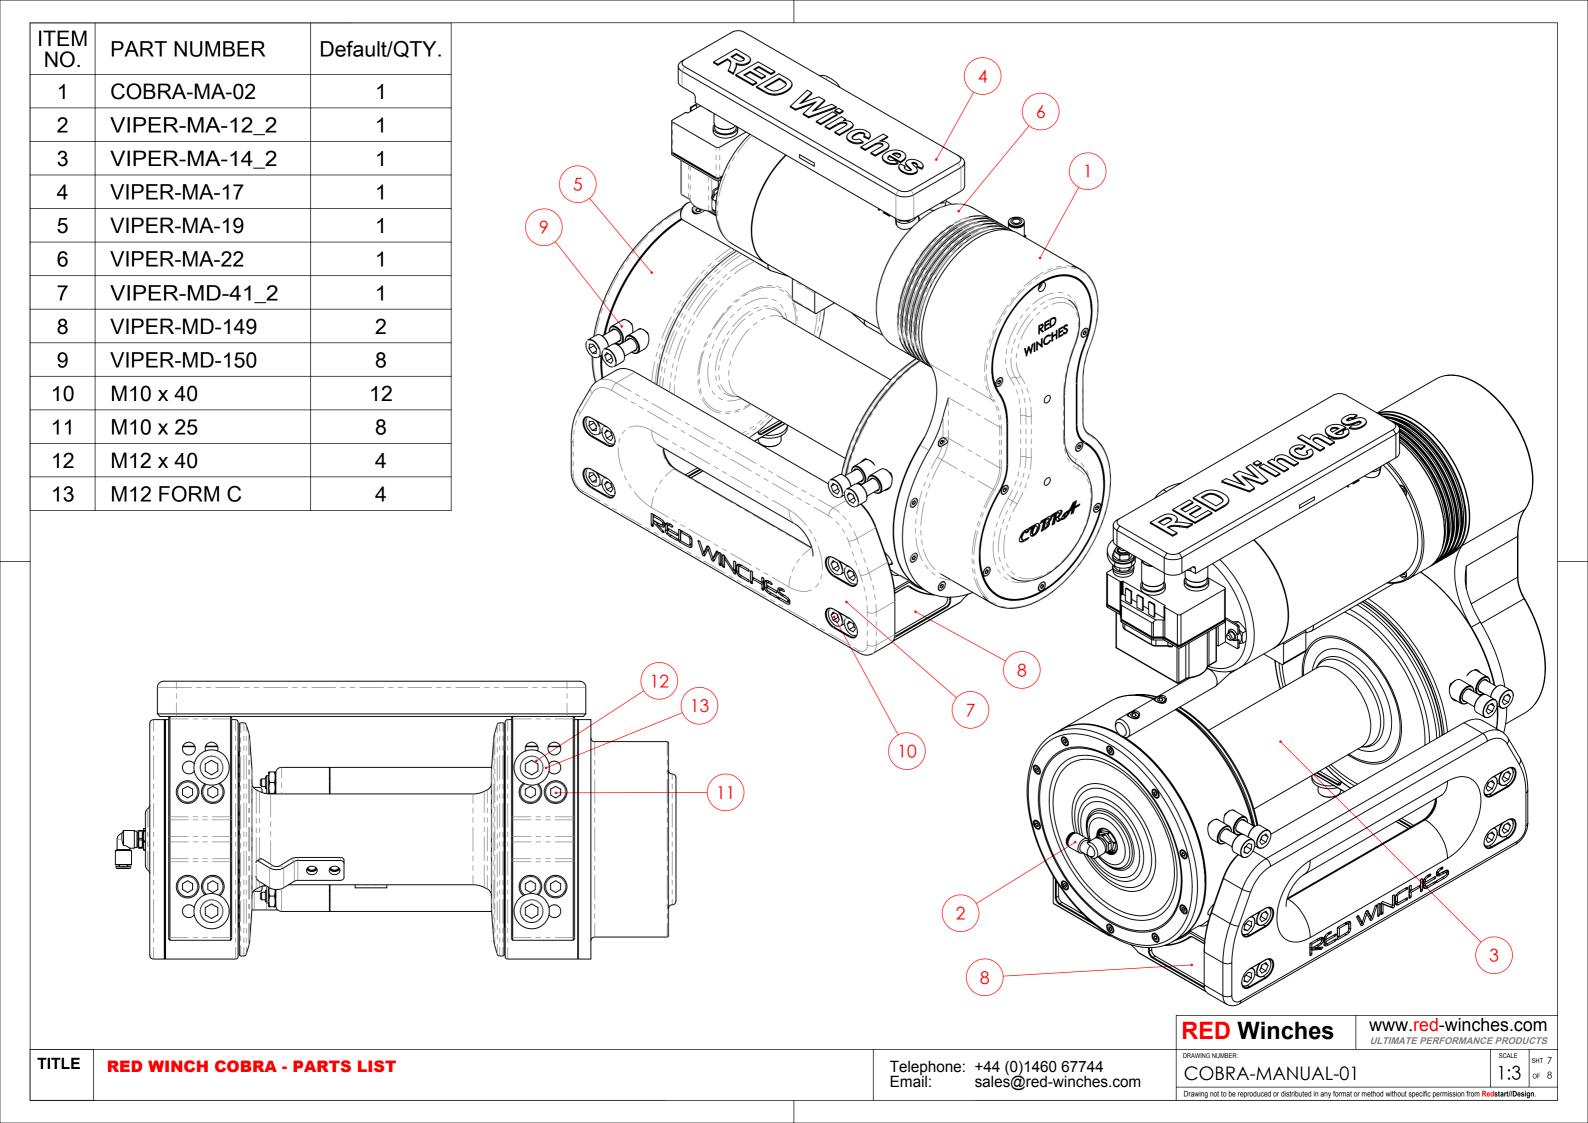

## **Lubrication Details**

**Grease Specification: Gearbox** Castrol Spherol L-EP 2 or BP Energrease LS-EP 2

**Grease Specification: Freespool Shaft Duck Oil for internal Piston Copper Grease for External Spline** 

As a guide Grease must be applied to the gears in the end housing and air freespool clutch plate as per the following:

The lubrication frequency is based on constant winch usage in hours per month:

1-4 Hrs - Add grease and cover gears every 6 Months

4-12 Hrs - Add grease and cover gears every 4 Months

This is based on dry above water level conditions.

If winch has been used within water or wet muddy ground for more than 50% of the hours specified the greasing frequency needs to be increased to half of those shown in the above chart.

Every 12 months the internals of the winch gearbox and freespool should be cleaned and the grease should be replaced.

Important: Freespool must be cleaned and internal parts sprayed with duck oil after the winch has been submerged in mud or water for long periods of time. The gearbox must also be inspected for water ingress and greased if necessary.

> **RED** Winches COBRA-MANUAL-01

Drawing not to be reproduced or distributed in any format or method without specific per