



Manuale d' istruzioni

Owner's Guide

Manuel d'instructions

Bedienungsanleitung

Instrucciones para el uso

Instruktionsmanual

Käyttöohje


使用说明书

BUGATTI



JACQUELINE

Warm-up your style

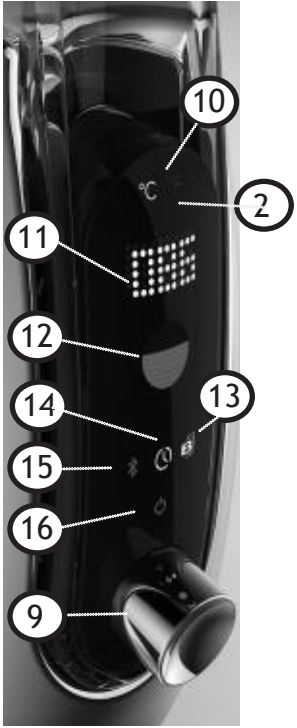

IMPORTANT NOTICES

Dear Customer, thank you for choosing Jacqueline, the kettle from Bugatti. Like any domestic appliance, this kettle must be used with care and attention to prevent people getting burnt and the kettle getting damaged.

BEFORE USING THE KETTLE FOR THE FIRST TIME, READ ALL THE INSTRUCTIONS ON INSTALLATION, USE AND MAINTENANCE AND THE SAFETY INSTRUCTIONS CAREFULLY. DO NOT USE THE KETTLE UNLESS YOU ARE THOROUGHLY FAMILIAR WITH THE INSTRUCTIONS.

WARNING

No liability is accepted for damage due to:

- incorrect use or use other than for its intended purpose
- using the kettle continuously
- repairs carried out by unauthorized persons
- use of non-original spare parts or accessories
- plug-in the kettle in a non-earthed socket

For further information, or in the event of problems that have not been sufficiently addressed in these instructions, contact Customer Care at BUGATTI:

on line at <http://www.casabugatti.com/home-appliance-service> or send an email to diva@casabugatti.it

SAVE THESE INSTRUCTIONS CAREFULLY and remember to pass them on to those who will use the kettle after you. If the instructions are lost before you use the kettle, request the instruction booklet from Customer Care at BUGATTI or send an e-mail to diva@casabugatti.it or download it from www.casabugatti.it. On the first page of the cover you will find the illustrations relating to the text. Keep the first page open as you read the instructions on use.

Contents

Pag. 15	Technical Features
Pag. “	Description of kettle parts
Pag. “	Kettle electronic control
Pag. 18	Installation and starting up
Pag. 19-20	Advice and recommendation on use
Pag. 19	Connect the base to power socket
Pag. 19	Selection of the temperature measurement unit
Pag. 19	Water level indication
Pag. 20	Boiling Function
Pag. 20	Heating temperature setting function
Pag. 20	Keep warm function
Pag. 21	Using B Chef Application
Pag. 21	Automatic shutdown & Safety system
Pag. 22	Cleaning and maintenance
Pag. 23	Troubleshooting
Pag. 24	Warranty and Service Centre

ATTENTION:

All the details of the text have been carefully checked. Our company reserves the full right to provide any explanation if there is any printing error or misleading information. Note: please be reminded that our company keeps updated every product detail shown on the instruction book, including technical specification. We reserve to revise the instruction book without prior notice. All product's outlook, shape and color are based on the standard of actual physical products.

TECHNICAL FEATURES

Power supply	See rating plate underneath machine
Power rating	See rating plate underneath machine
Dimensions	150x250x h x 280mm - 6" x 10 x 11" approximately
Body	Pressed Solid 18/10 Stainless Steel
Weight	1,4 Kg - 3 Pounds approximately
Length of power supply cord	0,75 meter - 30 inches approximately
Thermal overload protection	Built in
Kettle capacity	1,20 litres / 40.58 US fl.oz / 42.23 UK fl.oz
Certifications	See rating plate underneath machine
Warranty	As per attached certificate
Bluetooth info	Version 4.0 ; frequencies 2402- 2480 MHz ; Transmit Power 0dBm

DESCRIPTION OF KETTLE PARTS

Lid	①
Display	②
Stay-cool handle	③
18/10 stainless steel kettle	④
Power base unit	⑤
Connector	⑤a
Plug	⑥
Filter / Spout	⑦
Water maximum level mark	⑧

KETTLE ELECTRONIC CONTROLS

On/Off button	⑨
°C / °F icons	⑩
Temperature Digits	⑪
Water Level indication	⑫
BChef icon	⑬
Timer/Schedule icon	⑭
Bluetooth icon	⑮
On/off icon	⑯

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS CAREFULLY. THE KETTLE MUST BE USED ONLY BY ADULTS WHO HAVE BEEN TRAINED IN ITS USE. SAVE THESE INSTRUCTIONS CAREFULLY.

1. TO PREVENT SERIOUS INJURIES, ELECTRIC SHOCKS AND FIRE DO NOT IMMERSE CORDS, PLUGS, POWER BASE OR THE KETTLE ITSELF IN WATER OR OTHER LIQUIDS, EITHER PARTIALLY OR TOTALLY.

WARNING: DANGER OF BURNS!

PAY ATTENTION TO HOT SURFACES!

Do not touch hot surfaces. Use only the handle to pick-up the kettle. Use an oven glove when touching hot parts such as body (4), lid (1) and all surfaces of the kettle:

DANGER OF BURNS!

2. The kettle has been designed for **HOUSEHOLD USE ONLY.**

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Use kettle only for its intended use. The appliance is only to be used with the stand provided. Do not make any technical modifications that might cause risks.

3. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance, the base (5) and its cord out of reach of children aged less than 8 years. Close supervision is necessary when any appliance is used by or near children. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

4. A short power cord with plug is supplied to reduce the risk of becoming entangled in objects, to prevent people from tripping over it and to prevent the cord from wrapping around a longer cord. Long detachable power cords or extension cords are available but they may be used only if a QUALIFIED ELECTRICIAN can confirm that they comply with wiring regulations. DO NOT USE plug/socket adapters. If a long detachable power cord or extension cord is used:

a) The electrical rating of the detachable power cord or extension cord should be at least as powerful as the electrical

rating of the kettle indicated underneath the kettle itself.


b) The extension cord must be of the 3-wire/pole type and must be earthed. A long cord or extension cord must never protrude from furniture or over counter tops or table tops where it may be pulled on by children or tripped over.

c) Do not place kettle or cords on or near a hot gas ring or electric hotplate, or in or near the oven.

d) Do not use outdoors. Do not let the cords hang over the edge of the table or counter, or touch hot surfaces.

Do not operate the kettle with a damaged cord or plug or after the appliance develops faults, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination or repair. The use of accessory attachments not recommended by the appliances manufacturer may result in fire, electric shock or serious injuries to persons.

e) If the power cable or plugs are damaged, they must be replaced by the manufacturer or with authorized service centre or by a qualified person in order to prevent all risks.

5. Never touch live electrical parts. They may cause electric shocks and serious personal injury. Connect the power base unit (5) to a wall socket having the appropriate voltage. The voltage must correspond to the voltage indicated on the rating plate underneath the kettle (4). Make sure that the socket that you are using is earthed .

Do not use the kettle with bare or wet feet.

6. WARNING: avoid spillage of water or other liquids on the base (5) and on the connector (5a).

7. WARNING: Never fill the kettle above 1200 ml (40.58 US fl.oz / 42.23 UK fl.oz), the «MAX» mark (8).

8. WARNING: Never fill the kettle with water when it is positioned on the power base unit (5).

9. WARNING: Only fill the kettle with clean water. No milk, coffee or others.

10. WARNING: Never operate the kettle unattended. Do not move while the kettle is switched on.

11. WARNING: Never operate the kettle without water. A misuse limits the life of the kettle.

12. WARNING: Never boil water if the kettle is overfilled or with the lid (1) open. Boiling water may splash out and hurt people.

13. Always be careful to pour hot water slowly and carefully.

14. To prevent burns avoid to open the lid (1) when the water is being boiled or just after the kettle has switched off.

STEAM MAY BURN! Be careful when opening the lid (1), if the kettle is still hot and you wish to refill it with water.

Boiling water can cause burns.

15. After every boiling session empty the kettle completely . Never leave water in the kettle for a long period of time.

16. Be careful: hot surfaces. Use handles or knobs or wear oven gloves. Be very careful when touching very hot parts such as lid (1) , body (4) and all surfaces of the kettle. **WARNING! DANGER OF BURNS!** The kettle body (4) and lid (1) become very hot during use.

17. The heating element surface placed on the internal kettle bottom, is subject to residual heat marks after use.

18. To disconnect verify that the kettle is switched off and remove the plug (6) from the wall outlet. Always unplug the appliance by holding the plug not the cord. Note: Remove plug from wall outlet when you are not using the kettle.

19. Place the kettle on a flat surface, making sure that the feet adhere firmly to the support surface so that the appliance cannot be overturned. Do not place the kettle on or near hot surfaces or near naked flames. **CAUTION:** Do not operate the kettle on an inclined surface.

20. To be sure that the kettle works correctly, place it on a flat surface in an adequately lighted and hygienic environment with an easily accessible electrical socket. Keep the kettle at least 10 cm (4 inches) away from the walls.

21. Do not use the kettle under or near flammable material such as curtains, wallpaper, walls.

22. In the event of faults, defects or suspected faults after a fall, unplug the kettle immediately. Never switch on a faulty appliance. The repairs must be carried out by the BUGATTI Service Centre. Contact your dealer and/or contact Customer Care at BUGATTI or send an e-mail to diva@casabugatti.it . In the event of fire, use carbondioxide (CO2) extinguishers. Do not use water or powder extinguishers.

23. Detailed information on cleaning the appliance can be found in the section cleaning and maintenance.

24. **CAUTION:** To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

SAVE THESE INSTRUCTIONS CAREFULLY

Installation and starting up

The original packaging has been designed for dispatch by post. Keep it in case you need to return the kettle to the supplier. Before installing the kettle, comply with all the points of the safety instructions on the previous pages. After removing the kettle from its packaging, make sure that it is in perfect condition and make sure that no kind of matter, packaging material, warranty sheets or the like have accidentally fallen inside the kettle during transport or while opening the packaging.

The plastic bag in which the kettle is packaged should be kept out of reach of children as it poses a suffocation hazard. Be sure that the kettle is in perfect conditions. In order to remove dust that may have accumulated on the exterior surfaces of the kettle, simply dust it off with a dry soft cloth.

After you have carried out the above steps and have strictly followed the safety standards, proceed to connect to the power supply.

Connecting to power supply: electric current can kill! Follow safety instructions!

Plug the power cord (6) of the kettle into a power socket of the same voltage of the one indicated on the rating plate underneath the kettle.

Rinse out carefully all the internal surfaces of the kettle: fill the kettle with water until the maximum level (1200 ml/ 40.58 US fl.oz / 42.23 UK fl.oz), boil it and empty the boiler. Repeat at least two times.

FILL THE KETTLE:


a) remove the kettle body from the power base unit (5). Hold it by the handle (3)

b) open the lid (1) : press firmly on the rubber “point” (picture “a”) on the lid (1) (picture “b”).

Then release (picture “c”) and the lid (1) will automatically open. The lid (1) is not removable.

c) fill the kettle with water directly under the tap or fill it by pouring water from a bottle, jug or jar to the needed level. Do not overfill the kettle. Be careful not to go over 1200 ml (40.58 US fl.oz / 42.23 UK fl.oz), please do not exceed the water maximum level mark (picture “d”).

d) close the lid (1) : press on the rubber “point” (picture “a”) on the lid (1). Never operate the kettle with the lid (1) open.

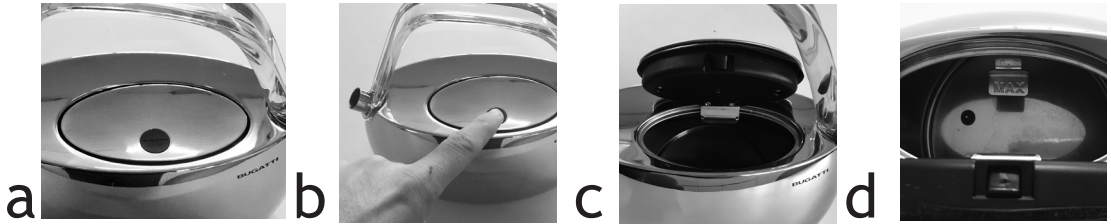

FUNCTIONS:

This kettle is electronic and all functions are controlled from the display or with the support of B Chef application:

a) DISPLAY functions: temperature setting and keep warm function

b) B CHEF APP functions: temperature setting, keep warm, timer/ schedule, Baby food water.

Advice and recommendations on use



1) CONNECT THE BASE (5) TO POWER SOCKET

a) **WARNING:** Make sure that the electric socket that you are using is suitably earthed. Never allow parts carrying live voltage to come into contact with water: it may cause a short circuit!!! (follow all the safety instructions specified before). To disconnect, make sure that the kettle is not running. Do not unplug the kettle from the wall outlet by pulling on the cord. Always unplug the appliance by holding the plug (6). To switch off the device completely, the plug (6) has to be removed from the socket.

b) When the plug (6) of the power base (5) is inserted into the socket, the base (5) will emit one bip. Before to place the kettle on power base wait for 10 sec. If kettle is placed on the power base before 10 sec. the display will show UP: kettle must be removed from the power base for around 10 sec.

c) When kettle is placed on the power base (5), the display switches on showing:

- the unit of measure of the temperature (10) in °C or °F,
- the digits (11) indicating the real temperature of the water (for 6 seconds) the water quantity in liters (for 3 seconds)
- the water level DOT with lines (12): each line corresponds to 0,1 Lt (3,52 oz)
- BChef APP icon (13) in red steady colour
- Timer and Schedule icon (14) OFF
- Bluetooth icon (15) blinking
- On/off icon (16) OFF.

2) SELECTION OF THE UNIT OF MEASURE OF THE TEMPERATURE

Kettle display can show the temperature in °C (Celsius Degree) or °F (Fahrenheit Degree). To select the different unit of measure simply double click/press the on/off button (9) . The icon °C or °F will illuminate accordingly.

3) WATER LEVEL INDICATION (12)

a) no water in kettle: digits show temperature (6 seconds) and the word “ADD” (3 seconds). It means that water need to be added

b) Water level: each single line of the DOT icon (12) corresponds to 100 ml (0,1 L-3,52 fl.oz) . When 100 ml (0,1 L-3,52 fl.oz) are poured in kettle one line of the DOT (12) is illuminated and blinks. Filling the kettle from 200ml up to 1200 ml, the lines of the DOT (12) illuminate raw by raw and are steady. When water is over 1,2 liters / 40.58 US fl.oz / 42.23 UK fl.oz , the digits (11) show the water temperature (6 seconds) and the word “MAX” (3 seconds) indicating there is too much water inside the kettle. **ATTENTION: NEVER OPERATE WHEN KETTLE IS OVERFILLED WITH MORE THAN 1200 ML OF WATER: DURING HEATING YOU MAY HAVE HOT WATER SPLASHED FROM THE SPOUT. DANGER OF BURN.**

Advice and recommendations on use

4) BOILING FUNCTION

- a) Place the kettle on the power base unit (5) and press the “on/off” button (9). When the kettle starts boiling/heating, the digits (11) grow up showing, on the display (2), the average temperature of the water inside the kettle.
- b) When the kettle is heating the red on/off icon (16) starts to breathe and the DOT water level indicator (12) change colour from Blue (cold water) to Red (Hot water).
- c) When the water temperature reaches 100 °C /212 °F the kettle switches off automatically, it emits 3 bips and the digits (11) show the word “HOT” for 10 seconds; then the digits (11) continue showing the average water temperature inside the kettle.
- d) At any time, the function boiling water, can be stopped by pressing the On/Off button (9).
- e) **POURING OUT WATER:** Remove the kettle from the power base unit (5), holding it by its handle (3). Ensure that the kettle body remains steady while lifting it from the power base unit (5). Pour the water from the spout (7) with the lid (1) closed. **ATTENTION :** boiling water can cause burns. Always ensure to pour out boiling water slowly and carefully, **taking care not to tilt the spout too rapidly.**
- f) The water temperature shown on the display corresponds to an average temperature of the water inside the kettle.

5) HEATING / TEMPERATURE SETTING FUNCTION

- a) The Kettle can heat the water to the required temperature between 40°C (104°F) and 100°C (212°F), Tolerance $\pm 3^\circ\text{C}$.
- b) Place the kettle on the power base unit (5). To set the temperature simply turn clockwise or counter-clockwise the on/off button (9). The digits (11) numbers increase or decrease accordingly. Stop to turn at required temperature between 40°C (104°F) and 100°C (212°F).
- c) The blinking digits (11) show the temperature selected for 15 seconds.
- d) When on/off button (9) is pressed, within these 15 seconds, the kettle starts to heat at the required temperature. If the on/off button (9) is pressed after these 15 seconds the temperature setting is cancelled and the kettle starts to boil to the default temperature (100°C / 212°F).
- e) When the water temperature reaches the required temperature the kettle switches off automatically, the kettle emits 3 bips and the digits (11) show the word “HOT” for 10 seconds; the digits show the current average water temperature inside the kettle.
- f) At any time, the heating water function, can be stopped by pressing the On/Off button (9).
- g) **ATTENTION:** The temperature setting function is not a permanent function. This function has to be set each time the temperature setting needs to be used. The water temperature shown on the display corresponds to an average temperature of the water inside the kettle (Tolerance $\pm 3^\circ\text{C}$)

6) KEEP WARM FUNCTION

The Kettle allows to keep, for one hour, the required water temperature between 40°C (104°F) and 100°C (212°F), Tolerance around $\pm 3^\circ\text{C}$. To activate this function follow the next steps:

- 1) To activate simply keep pressed on/off button (9) more than 2 seconds and the digits (11) show K W ON, that means KEEP WARM is activated.
- 2) If no temperature setting and ON/OFF button is pressed, kettle automatically keeps warm at(100°C / 212°F). If temperature setting is chosen,once fixed and on/off button is pressed, kettle keeps warm at the desired temp.
- 3) To deactivate this function keep pressed again the on/off button more than 2 seconds and the digits (11) show K W OFF, that means KEEP WARM is OFF.
- 4) **DURING** the time of KEEP WARM activated, the 3 digits show the required temperature for 6 seconds and the letters K W for 3 seconds. The on/off red icon (16) breathes.
- 5) After 60 minutes, keep warm function quits automatically.

USING BChef APPLICATION (iOS and Android available)

B-Chef is Bugatti's application for Tablets and Smartphones connectable through "Bluetooth® 4 dual mode low energy". This app helps in cooking and allows to cook as a great chef. In the specific case of the kettle B-Chef APP Functions are: Temperature setting, keep warm, Timer/Schedule, Baby food water

The B-Chef application allows to:

- consult an endless database of Bugatti's recipes;
- have updated advices, recipes and trends from great chefs;
- choose if do the recipe by yourself or with the help of the B-Chef function;
- share recipes on social networks or on the Bugatti Community;
- invite friends for dinner;
- do the shopping list and send it by e-mail;
- save your favourite recipes to create a personal recipe book;
- send your recipes to Bugatti in order to enlarge the Bugatti recipes' database.

B-Chef application gives the possibility to cook manually, following the steps of the recipe using the appliance manually, or to cook with the help of B-Chef application.

To cook with the help of B-Chef application, just download it and then follow the instruction on use of the app on your smart phone or tablet.

Automatic shutdown

The kettle is equipped with a system that automatically switches off the device shortly after the water is boiled.

If warm water is desired, the heating process can be stopped anytime by pressing the on/off button (9). The shutdown takes place automatically as the kettle is removed from its base (5).

Safety system

A thermostat protects the kettle from overheating: if the device is accidentally switched on empty, this system automatically switches off the device. The device will restart its normal functions in around 10 minutes.

If the first thermostat protection would not function due to improper use, another temperature limiter ensures protection.

Cleaning and maintenance

CAUTION: Always disconnect the kettle from the electrical outlet before cleaning.

Before cleaning, be sure the kettle is cold. Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.

Do not use abrasive cleansers or scouring agents of any kind on the interior or exterior of the kettle.

Do not immerse the kettle or power base in water or other liquid, and be sure that the electric kettle plug (6) and connector (5a) of the power base (5) is kept dry.

a) Filter / Spout (7)

Scale, or calcium, is a natural substance that forms when hard water is boiled. The filter is projected to retain the calcium of water. It is important to clean the filter regularly. The mesh of the filter is fixed inside the spout. To clean it deep a small brush in vinegar and gently brush inside the spout. Rinse under running water.

ATTENTION: This operation can be performed only when the kettle is not working and when the kettle has cooled down. BOILED WATER AND STEAM CAN BURN!!!

b) Decalcification

Decalcification refers to removing the calcium/scale deposits which may form in the interior metal parts of the kettle. TO GET THE BEST PERFORMANCE FROM YOUR KETTLE, DECALCIFY YOUR UNIT FROM TIME TO TIME. Frequency depends on the hardness of your tap water and how often you use the kettle. We suggest to do it every 100-200 boiling cycles, or every two weeks or every time you see white spots on the internal bottom surface of the kettle: it means that there is limestone sediment. We suggest use of a kettle descaler in order to dissolve these chalky deposits or lime build up. Follow the instructions on the descaler package. By the way BUGATTI suggests the following natural way: if a commercial descaler is not available, fill the kettle with 500 ml (16,90 US oz/ 17,59 UK oz) white vinegar and 500 ml (16,90 US oz/ 17,59 UK oz) water. Use a soft brush together with vinegar to clean to help to remove the chalky deposit. Bring the vinegar to a boil. You may need to repeat this several times with cooled vinegar to remove the calcium build up completely. When the descaling process is complete, empty the kettle and rinse out several times with clean water. Any other servicing should be performed by an authorized service representative.

Troubleshooting

If the kettle develops faults or defects or if irregularities are suspected, unplug it immediately. If you cannot eliminate the fault by following the instructions in this manual, contact Customer Care at BUGATTI: on line at <http://www.casabugatti.com/home-appliance-service> or send an email to diva@casabugatti.it Repairs carried out incorrectly expose the user to grave danger. No liability is accepted for damage or injury caused by repairs carried out incorrectly and in such cases warranty rights are voided.

TROUBLE		POSSIBLE CAUSE		SOLUTION
The kettle does not work properly or stops before boiling. Water tastes bad.		There is lime scale into the kettle. 1) Water is in the kettle for more then 12 hours. 2)The kettle is not well washed after the descaling cycle.		Make the descaling as for point b) of the Cleaning and maintenance chapter. 1)We suggest to change the residual water after each boling cycles. 2)Rinse the kettle sufficient times in order to remove completely the descaling product.
The kettle is switched on and after a few seconds it automatically switches off. The display on handle doesn't switch on		The kettle is empty and the protection system of the heating element is working. The kettle is not well positioned on the power base (5) and/or the plug (6) is not well insert in the socket.		Wait approximately 10 minutes, fill the kettle with water and switch it on. Check if the plug (6) of the power base (5) is well connected to the wall socket. Check if there is electricity in your system.
The water inside the kettle, during the heating, comes to the boil but the temperature, shown on the display, is lower than 99°C.		The kettle is used at an altitude over 500/1000 meter on the sea level.		Water boiling temperature varies according to the altitude than at sea level as the below list. In altitude the water boils at a lower temperature than 100°C (212,0 °F) due to the pressure difference . It is important you know that the display of the kettle shows the average boil temperature of the water into the kettle.
Altitude Meter	°C	°F	Altitude Feet	
0	100	212,00	0	
500 ÷ 1.500	98 ÷ 95	208,40 ÷ 203,00	1.640 ÷ 4.291	
1.500 ÷ 2.500	95 ÷ 91	203,00 ÷ 195,80	4.291 ÷ 8.202	
2.500 ÷ 4.000	91 ÷ 85	195,80 ÷ 185,00	8.202 ÷ 13.123	
* These dates are only for reference				
“UP” shown on display		Kettle placed on base during plug-in or within 10 sec .		Remove kettle from power base and wait for 10 sec. before to put it on base again.
Cannot cancel the schedule and the keep warm function activated by app.		Kettle does not stop the keep warm or start to heat water at not desired scheduled time.		ON/OFF button must be pressed for over 7 sec. After 7 sec. digits show the word “RES” and if the user releases the ON/OFF button all scheduled saved will be deleted.

Warranty


- 1) A warranty is deemed to be the replacement or repair free of charge of the parts making up the kettle that were faulty at the time of purchase due to manufacturing faults.
- 2) In the case of irreparable or repeated faults which are due to manufacturing faults as above, at the manufacturer's sole discretion, the machine will be replaced.
- 3) The warranty does not cover damage due to:
 - a) incorrect or faulty use
 - b) defects caused by accidental breakages or carelessness
 - c) failure to follow instructions and warnings, incorrect installation, cleaning and maintenance
 - d) maintenance and/or modifications performed by unauthorized personnel
 - e) use of non-original spare parts
 - f) carriage
 - g) using any kettle function without water continuously
 - h) any other circumstance that cannot be ascribed to manufacturing faults. Any claims not envisaged by law are excluded.
- 4) The warranty does not cover damage due to improper use and in particular due to non-domestic use.
- 5) The manufacturer accepts no liability for any direct or indirect harm or injury to persons, things and domestic animals that may arise from failure to abide by all the safety instructions contained in this manual, especially failure to abide by the instructions on installation, use and maintenance of the kettle.
- 6) Replacement or repair shall not extend the warranty period. The warranty does not cover the replacement of consumables, such as the resistances, battery, etc.
- 7) The warranty runs from the date of receipt of evidence of purchase and of receipt of the warranty card by BUGATTI.
- 8) **JOIN CASABUGATTI: WE KINDLY INVITE YOU TO REGISTER YOUR PRODUCT/WARRANTY ON OUR WEB SITE.** Select "REGISTER YOUR PRODUCT" from menu "PRODUCTS"
The link is: http://www.casabugatti.com/web_eng/registra_prodotto.asp

SERVICE CENTRE

In the event of a kettle fault, contact an authorized BUGATTI dealer, who will return the kettle to the manufacturer. The purchaser is responsible for all carriage and/or dispatch costs for all repairs covered or not covered by warranty. If possible, keep the kettle's original packing for dispatch. Important: If the nonconforming product is to be serviced by someone other than contact an authorized dealer, please remind the service to call our Consumer Service Center to ensure that the problem is properly diagnosed, the product serviced with the correct parts, and to ensure that the product is still under warranty.

In case of any need, PLEASE, contact us on-line at <http://www.casabugatti.com/home-appliance-service> or send an email to diva@casabugatti.it

DISPOSAL OF THE PRODUCT IN CONFORMITY TO EUROPEAN DIRECTIVE 2002/96/EC.

 At the end of its working life the product must not be disposed of alongside urban waste. It can be delivered to local-authority separated waste collection centres or to dealers who provide this service. Separated disposal of a household appliance enables possible negative consequences for the environment and health arising from improper disposal to be eliminated and enables the materials of which it is made to be recovered in order to make significant power and resource savings. The symbol of a moveable waste bin marked with a cross displayed on the product indicates that as a household appliance it must be disposed of separately.