

## THE CORNERSEALER 400-CS01



Have you ever had creases pop up at the corners of a wrap?  
Or small overlaps that lose their adhesion?

This practical tool is intended for releasing the tension off installed film edges around corners. The CornerSealer gives you the possibility to flatten and fixating small edges, wrinkles, curls and overlaps to melt the film a little bit.

**Perfect for:**  
**Fixating the edges of wrapped film around corners**  
**Melting together small film overlaps**

**How to use:**

- *Make sure film is clean and degreased*
- *Activate the device to preheat the flat head This takes about 10-15 seconds (preheating time increases with deteriorating batteries). ATTENTION! Head can get hot! Avoid skin contact to prevent injury*
- *Place the flat head against the film area and push down firmly*
- *Avoid overheating! 1-3 seconds of pressing is usually sufficient*

**Additional Information:**

- *The enormous heat produced by the Corner Sealer drains batteries fast - make sure you have sufficient replacement batteries*
- *First test the device on a small area out of sight, to assess its effect*
- *The heat resistance of films varies. Keep this in mind to prevent damaging the film*
- *In any case avoid contact with the head when still hot after use*
- *Do not use the Corner Sealer for other applications than intended and longer than 5 minutes in one session*
- *Use alkaline batteries (not rechargeable)*

