



**MAX** PRO  
XPERIENCE HAIR DRYER

## MAX PRO XPERIENCE HAIR DRYER

The Max Pro Xperience hair dryer is a professional hair styling tool and very unique in its category. The hair dryer offers the user a good grip thanks to the refined rubber where the handgrip is made of. The hair dryer has a powerful AC Motor with special M Power that provides fast airflow. This is a special technology that dries the hair even faster and ensures that the motor has an even longer durability. In addition, the hair dryer has 2 air speeds and 3 heat settings which are individually adjustable from each other. The Xperience hair dryer produces negative ions, which shortens the drying time. The negative ions penetrate deep into the hair and ensure that the hair is dried from the inside. The negative ions also ensure that the natural moisture balance is maintained. Thanks to the soft ceramic technology, the scales will close and the hair is smoothed and cared for, creating a soothing look.

### INSTRUCTIONS

1. Always make sure that your hair is completely clean before using the hair dryer.
2. Make sure there is no water on the floor or on other surfaces near the outlet or the hair dryer.
3. Insert the plug of the hair dryer into the outlet. The hair dryer could have a polarized plug, which has one pin which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.
4. Insert the plug of the hair dryer into a socket and slide the switch on the inside of the handgrip to the 1st or 2nd position.
5. The hair styling tool will become very hot immediately, but it will take about 40 seconds before it has an optimal uniform heat distribution.
6. The hair styling tool becomes very hot, so make sure it does not make contact with the skin.
7. Allow your hair to cool down before touching or brushing it.
8. After blow-drying your hair, switch off the hair styling tool by putting the switch on the inside to the "0" position, unplug the power cord and allow the hair styling tool to cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.

### HAZARDS

- Never use the styling tool near water or while bathing, showering or washing. If the styling tool is in the water while it is running, do not pick it up unless the power is turned off.
- Never use styling tools with bare or wet feet, as this may cause an electric shock or injury.

The logo features the word "MAX" in a large, bold, black sans-serif font. To the right of "MAX", the word "PRO" is written in a smaller, white sans-serif font, slanted upwards and enclosed within a black parallelogram shape.

XPERIENCE HAIR DRYER

## **BURNS**

- Always use a heat resistant glove if you have one nearby.
- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.
- When you burn yourself, stop with styling your hair and take care of the burn immediately.
- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.
- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.
- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via [www.maxprohair.com](http://www.maxprohair.com)

## **DEFECTS**

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.
- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damage caused by incorrect or improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.

## **STORING**

- When you're done with your styling tool, unplug the power cord and give the styling tool the time to cool down before storing it.
- Never wrap the cord around your styling tool, there is a chance that it will tear. Avoid sharp bends and twisting.
- For future usage, keep the styling tool in a safe, dry place. Store it out of reach of children (and pets).



XPERIENCE HAIR DRYER

## **WARRANTY**

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! To register for this exclusive warranty, you can visit us at [www.maxprohair.com](http://www.maxprohair.com) and fill in the registration form.

Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer. For questions about the warranty, please contact our customer service or visit us at [www.maxprohair.com](http://www.maxprohair.com) If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!

## **GOODBYE TO BAD HAIR DAYS**

Max Pro  
Tel: +31 (0)20 261 0907  
Email: [info@maxprohair.com](mailto:info@maxprohair.com)



XPERIENCE HAIR DRYER