



**MAX** PRO  
TWIST CURLER

## MAX PRO TWIST CURLING IRON

With the Max Pro Twist curling iron you can easily create a beautiful bunch of curls with a long-lasting fresh salon look without tampering with all kinds of hair products. The Max Pro Twist curling iron consists of a 100% ceramic bar that emits infrared heat and provides soft, full and healthy curls. The hair straightener uses negative ion technology that neutralizes curls and eliminates static hair which makes your hair look soft and healthy. The negative ions in the curling iron collect the small dust and dirt particles that get entangled in your hair during the day, which provides that you have clean and anti-static hair after curling it. This curling iron emits infrared heat so that your hair feels soft; this infrared heat also prevents color fading. The Max Pro Twist curling iron has a handgrip made of rubber, a digital display that heats up to 220°C and a dual voltage for use abroad. Always wear the included heat resistant gloves when using the curling iron.

## INSTRUCTIONS

1. Always make sure that your hair is completely clean and dry before using curling iron.
2. Make sure there is no water on the floor or on other surfaces near the outlet or the curling iron.
3. Insert the plug of the curling iron into the outlet. The curling iron could have a polarized plug, which has one pin which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.
4. Press the "ON/OFF" button on the top of the curling iron until the temperature is shown on the display. The hair styling tool will instantly warm up, but it will take about 40 seconds before it has optimal uniform heat distribution.
5. When the curling iron is at temperature, you can set the desired temperature with the +/- button at the top of the hair styling tool. The most used temperature is 180 degrees, but this depends on the type of the hair.
6. Put on the included heat-resistant gloves. Avoid each contact between bar and skin when the hair styling tool is in the "ON" position. The bar is hot and can cause burns. Furthermore, be sure to pay attention to your ears while turning or moving of the curling iron because your scalp and hands are not the only thing that you can burn.
7. Divide the hair and start with long hair with the lower locks at the bottom of your head. You can place the curling iron at the start of a lock and place it around the curling iron (a guideline in every technique is that when you turn inwards, you create more curls. And when you turn out, you create more volume.) Make sure that the hair lies flat on the bar. After this, wrap the rest of the lock around the rod. In this way the hair is well divided, the warmth is divided evenly through your hair and each part of the lock forms into the right shape. After 3 seconds of warming, let the lock fall into your palm and let it cool down for 3 seconds before you release it. The cooling down is a very important step for longevity of the curls. Always start at the bottom and then grab a lock that is higher. The closer your curling iron is to your roots, the more curls you get in your hair. If you want a full bunch of curls or waves, start with the curling iron close to the roots of your hair. However, always be careful not to burn your scalp. If you just want to have curls at shoulder height, turn the curling iron from the middle of the hair lengths.
8. Finished? Press the 'ON/OFF' button until the temperature is no longer shown on the display. Unplug the power cord and let the hair styling tool cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.



## HAZARDS

- Never use the styling tool near water or while bathing, showering or washing. If the styling tool is in the water while it is running, do not pick it up unless the power is turned off.
- Never use styling tools with bare or wet feet, as this may cause an electric shock or injury.

## BURNS

- Always use a heat resistant glove if you have one nearby.
- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.
- When you burn yourself, stop with styling your hair and take care of the burn immediately.
- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.
- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.
- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via [www.maxprohair.com](http://www.maxprohair.com)

## DEFECTS

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.
- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damage caused by incorrect or improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.

## STORING

- When you're done with your styling tool, unplug the power cord and give the styling tool the time to cool down before storing it.
- Never wrap the cord around your styling tool, there is a chance that it will tear. Avoid sharp bends and twisting.
- For future usage, keep the styling tool in a safe, dry place. Store it out of reach of children (and pets).



TWIST CURLER

## **WARRANTY**

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! To register for this exclusive warranty, you can visit us at [www.maxprohair.com](http://www.maxprohair.com) and fill in the registration form.

Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer.

For questions about the warranty, please contact our customer service or visit us at [www.maxprohair.com](http://www.maxprohair.com). If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!

## **GOODBYE TO BAD HAIR DAYS**

Max Pro  
Tel: +31 (0)20 261 0907  
Email: [info@maxprohair.com](mailto:info@maxprohair.com)



TWIST CURLER