



MAX PRO

MIRACLE 5IN1 CURLER

MAX PRO MIRACLE 5in1

The Max Pro Miracle 5in1 is a complete curling iron with barrels in five different sizes. [18/9mm, 19mm, 25mm, 25/19mm & 32/25mm] that curls your hair – per lock – in just three seconds. Due to the bar of ceramics and the short curling time, your hair does not or hardly damage. In addition, you can adjust the heat by yourself via the temperature switch. [adjustable between 80°C – 220°C], which is displayed via an LCD display. The temperature switch and the five different sizes of barrels make the Max Pro Miracle 5in1 suitable for everyone – both long and short hair type – and wanted among the professionals; hairdressers and hair stylists.

What is so unique about the 5in1? The barrels of this curling iron are not equipped with a click system, but with a rotation system. This is less sensitive which benefits the quality of the 5in1 compared to other complete curling irons. Every size rod [ceramic] provides the hair of another kind of curl. The smaller the bar, the smaller the curl. The bars with a smaller end ensure a very natural course of the curl.

The handgrip of the Max Pro Miracle 5in1 is made of rubber, this is a very heat resistant material. This ensures that the handgrip never gets hot and is comfortable in the hand. The Miracle 5in1 comes with a heat resistant glove included, which you can use to easily cover the hair to wrap around the ceramic bar without burning your hands. The 5in1 is warmed up within four seconds and ready for use. Thanks to the dual voltage, the Miracle curling iron is also suitable for use abroad. Furthermore, the curling iron is provided with a safe shut-off function. The Miracle turns off automatically after 60 minutes.

INSTRUCTIONS

1. Always make sure that your hair is completely clean and dry before using curling iron.
2. Make sure there is no water on the floor or on other surfaces near the outlet or the curling iron.
3. Open the suitcase and take out the handgrip of the curling iron and the desired barrel. Look if the pins on the bottom of the bar are in the same directions as the contact holes inside of the handgrip. This can also be checked by putting the dot (screw) on the rod in the direction of the dot. After that, slide the rod into the handle until you have a click. Feel and tighten it with the spin function at the top of the handle.
4. Insert the plug of the curling iron into the outlet. The curling iron could have a polarized plug, which has one pin which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.
5. Press the "ON/OFF" button on the top of the curling iron until the temperature is shown on the display. The hair styling tool will instantly warm up, but it will take about 40 seconds before it has optimal uniform heat distribution.
6. When the curling iron is at temperature, you can set the desired temperature with the +/- button at the top of the hair styling tool. The most used temperature is 180 degrees, but this depends on the type of the hair.
7. Put on the heat-resistant gloves (at the bottom of the suitcase). Avoid each contact between bar and skin when the hair styling tool is in the "ON" position. The bar is hot and can cause burns. Furthermore, be sure to pay attention to your ears while turning or moving of the curling iron because your scalp and hands are not the only thing that you can burn.

The logo features the word "MAX" in a large, bold, black sans-serif font. To the right of "MAX", the word "PRO" is written in a smaller, white sans-serif font, slanted upwards and contained within a black parallelogram shape.

MIRACLE 5IN1 CURLER

8. Divide the hair and start with long hair with the lower locks at the bottom of your head. You can place the curling iron at the start of a lock and place it around the curling iron (a guideline in every technique is that when you turn inwards, you create more curls and when you turn out, you create more volume.) Make sure that the hair lies flat on the bar. After this, wrap the rest of the lock around the rod. In this way the hair is well divided, the warmth is divided evenly through your hair and each part of the lock forms into the right shape. After 3 seconds of warming, let the lock fall into your palm and let it cool down for 3 seconds before you release it. The cooling down is a very important step for longevity of the curls. Always start at the bottom and then grab a lock that is higher. The closer your curling iron is to your roots, the more curls you get in your hair. If you want a full bunch of curls or waves, start with the curling iron close to the roots of your hair. However, always be careful not to burn your scalp. If you just want to have curls at shoulder height, turn the curling iron from the middle of the hair lengths.

9. Finished? Press the 'ON/OFF' button until the temperature is no longer shown on the display. Unplug the power cord and let the hair styling tool cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.

HAZARDS

- Never use the styling tool near water or while bathing, showering or washing. If the styling tool is in the water while it is running, do not pick it up unless the power is turned off.
- Never use styling tools with bare or wet feet, as this may cause an electric shock or injury.

BURNS

- Always use a heat resistant glove if you have one nearby.
- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.
- When you burn yourself, stop with styling your hair and take care of the burn immediately.
- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.
- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.
- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via www.maxprohair.com

DEFECTS

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.
- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damage caused by incorrect or improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.



MIRACLE 5IN1 CURLER

STORING

- When you're done with your styling tool, unplug the power cord and give the styling tool the time to cool down before storing it.
- Never wrap the cord around your styling tool, there is a chance that it will tear. Avoid sharp bends and twisting.
- For future usage, keep the styling tool in a safe, dry place. Store it out of reach of children (and pets).

WARRANTY

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! (On all electronic products) To register for this exclusive warranty, you can visit us at www.maxprohair.com and fill in the registration form. Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer. For questions about the warranty, please contact our customer service or visit us at www.maxprohair.com If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!

GOODBYE TO BAD HAIR DAYS

Max Pro
Tel: +31 (0)20 261 0907
Email: info@maxprohair.com



MIRACLE 5IN1 CURLER