


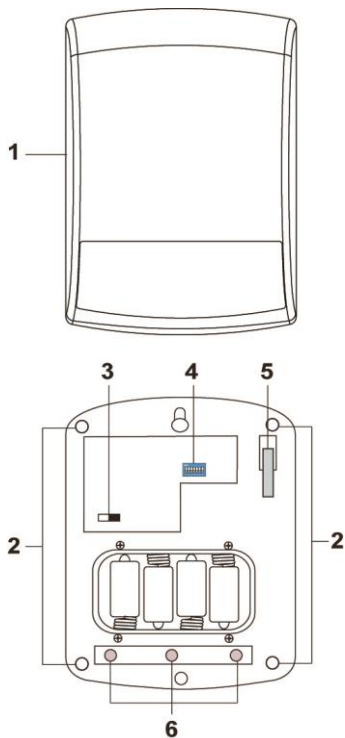

Outdoor Siren

1. Front Cover
2. Mounting Holes
3. Battery Switch
4. Dip Switches
5. Tamper Switch
6. LED Strobe Light

Sirene voor buiten

(NEDERLANDS)

1. Afdekplaatje voorzijde
2. Schroefgaten t.b.v. montage
3. Batterijschakelaar
4. DIP-schakelaars
5. Anti-manipulatie-schakelaar
6. Stroboscoop LED

ENGLISH

Follow instruction in this document to setup and use the accessory. For further setting and operation detail, please visit Blaupunkt website <http://www.blaupunkt.com> to download the complete manual.

Getting Started

1. Put the Control Panel into learning mode.
2. Slide the Battery Switch to ON position to power on the siren. The siren will emit a beep and flash its LEDs once.
3. Locate the Dip Switches, use a sharp object to slide the Dip Switch marked **1** to **ON** position. The siren will send a learn signal in 3 seconds and emit a beep, the LED 1 and 3 will flash once.
4. Refer to Control Panel manual to complete learning process.
5. If learning is successful, the siren will emit a beep, the LED 1 and 3 will flash once to confirm.
6. Slide Dip Switch **1** to OFF position. Learning is now complete
If learning fails, Slide Dip Switch 1 to OFF, then ON again to repeat learning process.

Mounting Location

- The siren is waterproof for outdoor mounting.
- Mount the siren on external wall of your house to attract attention when an alarm is activated.
- Mount as high as possible out of easy reach.

Installation

1. Use the four mounting holes as template, drill holes on the wall
2. Fix the back cover onto the wall with screws and plugs provided.
3. Replace the front cover on the back cover; make sure the tamper switch is fully depressed when siren is mounted.

Battery

4 x 1.5V alkaline D batteries
(Pre-inserted)

NEDERLANDS

Volg de instructies in document voor installatie en gebruik van dit accessoire. Voor uitgebreidere informatie over instellingen en gebruik bezoekt u de Blaupunkt website <http://www.blaupunkt.com> om de complete handleiding te downloaden.

Aan de slag

1. Zet het controlepaneel in de koppelmodus,
2. Schuif de batterijschakelaar naar de AAN positie (ON) om de sirene van stroom te voorzien. De sirene zal piepen en de LED zal knipperen om aan te geven dat het apparaat klaar is voor gebruik.
3. Vind de DIP-schakelaars en gebruik een spits object om DIP-schakelaar 1 naar de AAN (ON) positie te schuiven. De sirene zal gedurende 3 seconden een koppelsignaal sturen en een piepsignaal geven. De LED's 1 en 3 knipperen 1 keer.
4. Zie de handleiding van het controlepaneel voor afronding van het koppelproces.
5. Indien succesvol gekoppeld, geeft de sirene een piepsignaal en knipperen LED's 1 en 3 één keer ter bevestiging.
6. Schuif DIP-schakelaar 1 naar de UIT (OFF) positie. De koppeling is nu voltooid. Indien de koppeling niet lukt, schuift u DIP-schakelaar 1 naar UIT en dan weer naar AAN om het leerproces vanaf stap 3 te herhalen.

Ophanglocatie

- De sirene is waterdicht en daardoor geschikt voor montage buiten.
- Monteer de sirene op een buitenmuur van uw huis, om aandacht te trekken indien het alarm geactiveerd wordt.
- Monteer zo hoog mogelijk, om eenvoudige toegang voor kwaadwillenden te verhinderen.

Installatie

1. Gebruik de 4 schroefgaten voor montage als sjabloon, en boor gaten in de muur.
2. Monteer de achterzijde aan de muur met de bijgeleverde pluggen en schroeven.
3. Plaats de afdekplaat voorzijde over de achterzijde, en zorg

ervoor dat de anti-manipulatie-schakelaar volledig is ingedrukt als de sirene is gemonteerd.

Batterij

4 x 1,5V alkaline D batterijen
(voorgemonteerd)