


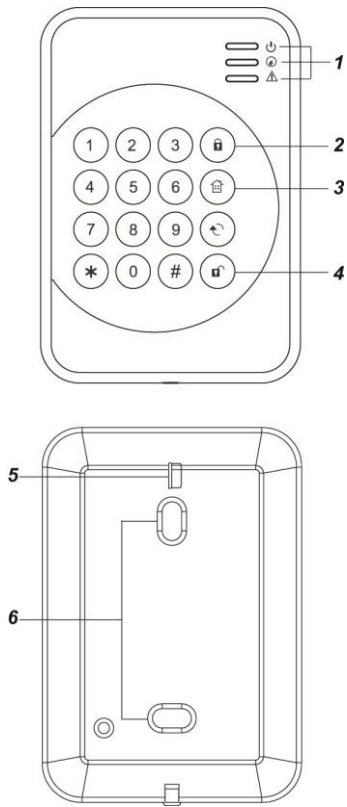

Remote Keypad

1. LED Indicators
2. Arm Key
3. Home Arm Key
4. Disarm Key
5. Battery Insulator
6. Wall mounting Knockouts

Toetsenpaneel met

numerieke toetsen

(Nederlands)

1. LED Indicatoren
2. Buitenshuis inschakelen
3. Binnenshuis inschakelen
4. Uitschakelen
5. Isolatiestrip batterij
6. Voor-gestante gaten voor montage

ENGLISH

Follow instruction in this document to setup and use the accessory. For further setting and operation detail, please visit Blaupunkt website <http://www.blaupunkt.com> to download the complete manual.

Getting Started

1. Pull out the battery insulator to activate battery.
2. Put the Control Panel into learning mode.
3. Press both # and * keys to learn the keypad, the keypad will emit a long beep
4. Refer to Control Panel manual to complete learning process.

Mounting Location

We recommend the Remote Keypad to be mounted at following locations:

- Mount at door way or back door for entry control.
- Mount in your bedroom for easy access of alarm system at night.
- Mount at chest height for ease of operation

Installation

1. Break through the knockouts on back cover.
2. Drill holes into wall using the knockouts as template.
3. Fix the Remote Keypad base onto wall with the screws and plugs provided.
4. Replace the front cover onto the base.

Basic Operation

- Enter a User PIN Code and press the **Away Arm** key to away arm your alarm system.
- Enter a User PIN Code and press the **Home Arm** key to home arm your alarm system.
- Enter a User PIN Code and press the **Disarm** key to disarm your alarm system.
- For advanced operation instruction, please download the complete manual from <http://www.blaupunkt.com>

Battery

1 x 3V lithium battery (Pre-inserted)

NEDERLANDS

Volg de instructies in dit document voor installatie en gebruik van dit accessoire. Voor uitgebreidere informatie over instellingen en gebruik bezoekt u de Blaupunkt website <http://www.blaupunkt.com> om de complete handleiding te downloaden.

Aan de slag

1. Trek aan de isolatiestrip om de batterij te activeren
2. Plaats uw controlepaneel in de koppelmodus
3. Druk op # en * tegelijk om het toetsenpaneel in koppelmodus te plaatsen, het toetsenpaneel geeft een lange piep.
4. Zie verder de handleiding van uw controlepaneel voor afronding van het koppelproces.

Ophanglocatie

We bevelen aan het toetsenpaneel op te hangen op een van de volgende locaties:

- Bij voordeur of achterdeur voor toegangscontrole.
- In uw slaapkamer voor makkelijke toegang tot het systeem 's nachts
- Op borsthoogte voor gemakkelijk gebruik.

Installatie

1. Druk de voor-gestante gaten open.
2. Boor gaten in de muur, gebruik de voor-gestante gaten hiervoor als sjabloon.
3. Bevestig het toetsenpaneel aan de muur met de meegeleverde pluggen en schroeven.
4. Plaats de afdekking weer op het apparaat.

Bediening

- Voer een PIN code in en druk de **Buitenshuis inschakelen** knop in om het systeem in te schakelen als u de woning verlaat.
- Voer een PIN code in en druk de **Binnenshuis inschakelen** knop in om het systeem in te schakelen als u in huis blijft.
- Voer een PIN code in en druk de **uitschakelen** knop in om het systeem uit te schakelen.
- Voor verdere instructies voor gebruik kunt u de uitgebreide handleiding downloaden van <http://www.blaupunkt.com>

Batterij

1 x 3V lithium batterij
(geïnstalleerd)