




Assembly Instruction

Units 661- 662 - 664 inground

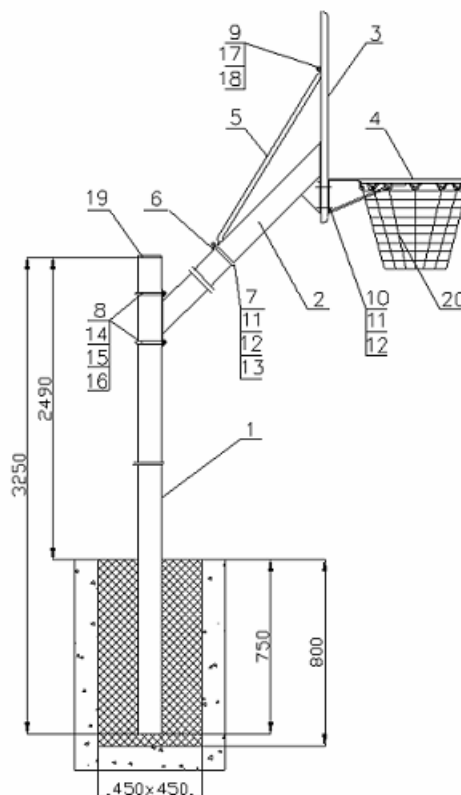

List of parts:

1. Pole	- 1
2. Ext. arm	- 1
3. Backboard	- 1
4. Goal	- 1
5. Support tubes	- 2
6. Steel plate	- 1
7. U bolt M10	- 1
8. U bolt M12	- 2
9. Carriage bolt M8x60	- 2
10. Screw M10 x 70	- 4
11. Nut M10	- 6
12. Round washer 10	- 6
13. Spring washer 10	- 2
14. Nut M12	- 4
15. Round washer 12	- 4
16. Spring washer 12	- 4
17. Nut M8	- 2
18. Round washer 8	- 2
19. Plastic cover 10x100	- 1
20. Net	- 1

Mountage:

1. Dig a hole with dimensions: 450x450x800
2. Embed the pole 2 in concrete. Axis of the pole should be perpendicular to the ground. Protect the pole with plastic cover part 19
3. Attach the backboard part 3 and a goal part 4 with extension arm part 2 (using parts 10,11,12).
4. Mount support tubes pos. 5 (using parts 7, 11, 12,13,9, 17, 18).
5. After concrete has hardened attach the extension arm part 2 to the pole part 1 (using parts 8, 14,15,16).
6. Set the goal part 4 on a height of 3050±5 mm