

Step
1

Pull out the inner gray container about 50 millimeters. Then twist off the double pin.


Continue pulling out the inner gray container, which activates the Absorpole.



Step
2

Match the two holes in the gray and blue parts of the Absorpole.

Insert the double pin through the two holes from the back. Push the double pin all the way through until it clicks.

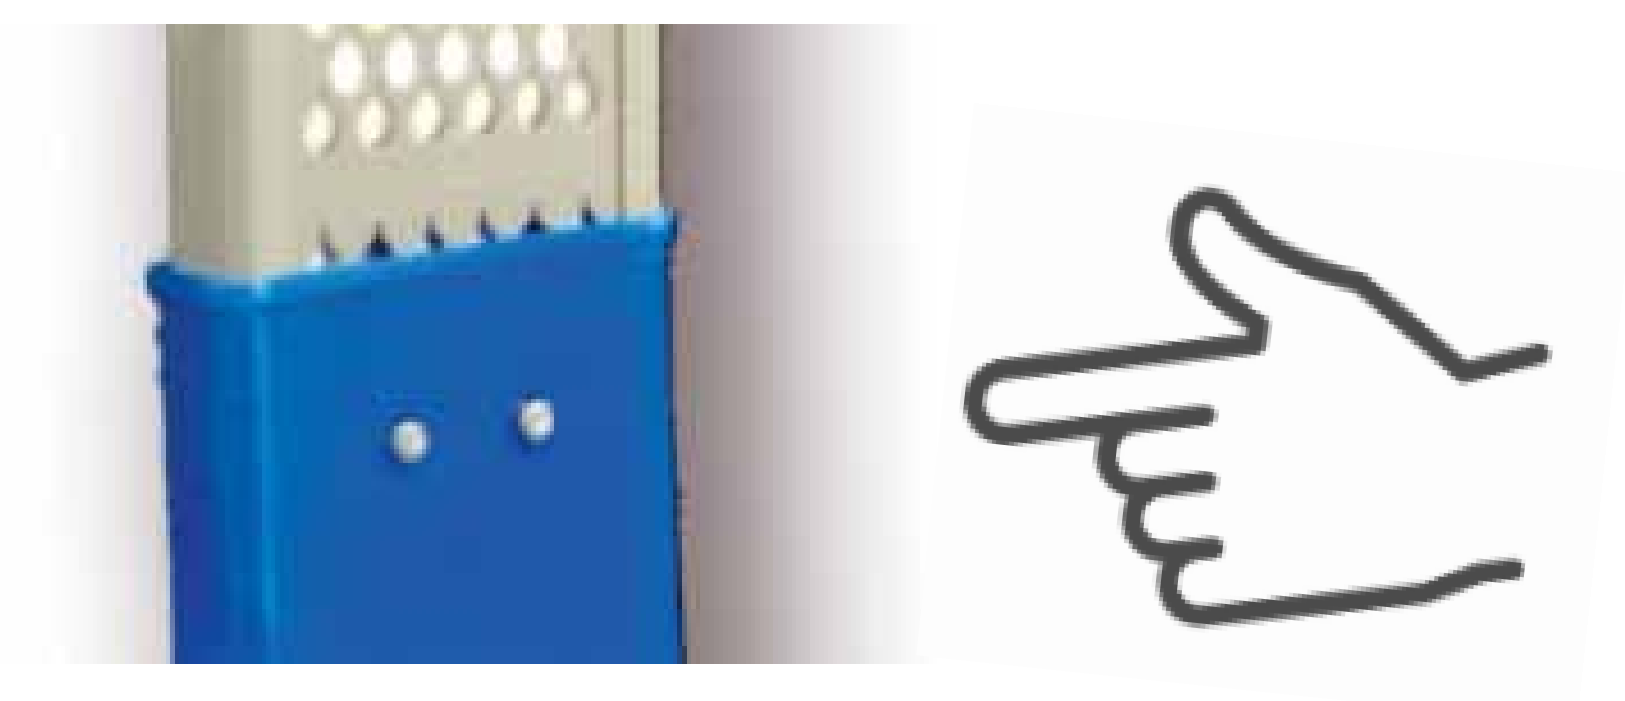

Step
3

Hang on container lashing ring.

Press hook downwards until it clicks into position.

