

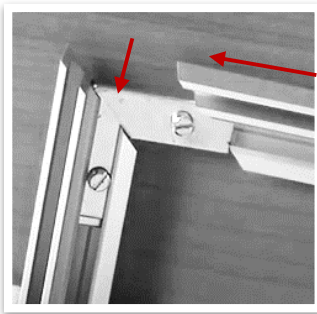
WALL FRAME BASIC 19 mm

ITEMS DELIVERED

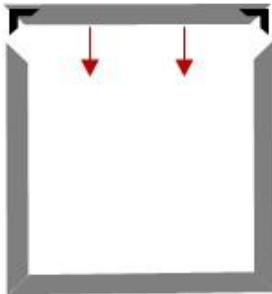
- 4 profile pieces with holes for wallmounting
- 4 locks without holes
- 4 locks with holes/screws
- (textile print with rubber lip all around)

YOU NEED ADDITIONALLY

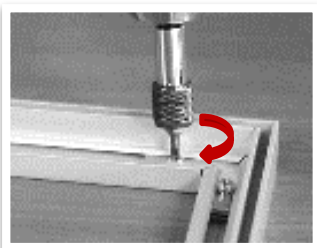
- slotted screwdriver
- screws/dowels

STEP 1

Connect corner

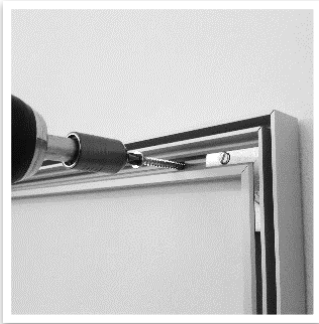
Place a lock without holes under a lock with holes/screws.
Take a profile piece and put the locks in the according rail in the profile.
Put another profile piece on the lock.

STEP 2

Connect all profiles and corners

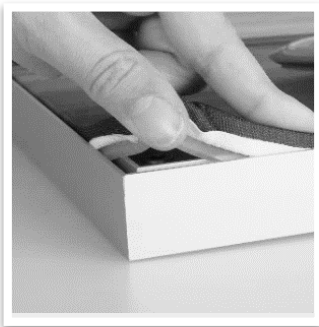
Repeat step 2 with all locks and profile pieces.
Equip the last profile piece with the 4 left locks and put it on the 3 already mounted profiles.

STEP 3

Tighten all locks and screws

Put the frame on an even ground and tighten all screws of the locks with a slotted screwdriver.

INSTRUCTIONS**STEP 4****Fix the frame to the wall**

Hold the frame on the wall and mark the spots for the drillings with a pencil. Drill the holes into the wall and put the corresponding dowels in. Then fix the frame with screws.

STEP 5**Insert textile**

Insert the textile with the rubber lip into the according notch of the frame. Make sure that you hold the rubber lip right, since otherwise the textile will not fit in the frame: Fold the rubber lip slightly inwards (90°) and put it into the notch (see image).

Note regarding the wall mounting:

Depending on the wall conditions, different screws and dowels are necessary. Please check before mounting which mounting materials are suitable for your wall.