

WALL LIGHTBOX CHAIN 150 mm

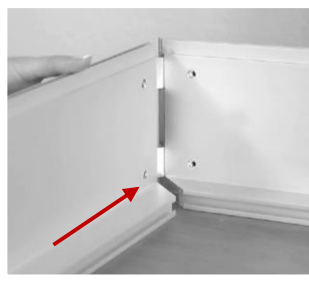
ITEMS DELIVERED

- 4 profile pieces with premounted power supply
- 4 locks with 16 screws and flat washers
- 1 allen key
- (wallmounts)
- (2 textiles with rubber lip all around)

YOU NEED ADDITIONALLY

- drill machine
- (dowels, screws)

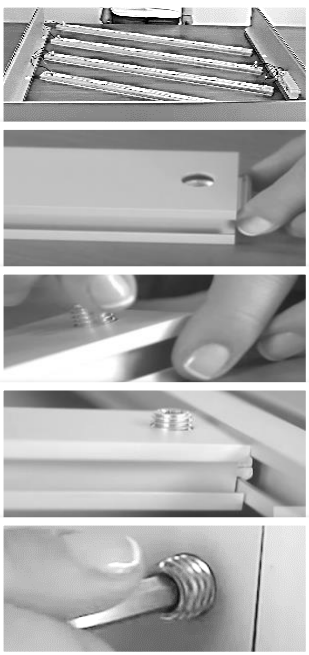
STEP 1



Connect corner

Take a profile piece and put the locks in the according rails in the profile. Put another profile piece on the locks. Connect 3 profile pieces in this way.

STEP 2

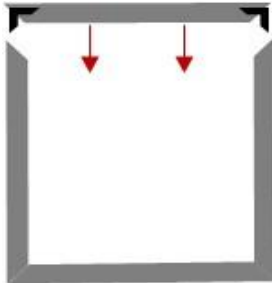


Insert stabilizer

This could also be done after the frame mounting, but it is easier if only 3 profiles are connected.

Spread the stabilizer profiles in the frame. Prepare the stabilizers by inserting the locks in the stabilizer, so the holes of the lock and the stabilizer are above each other. Do this on both sides.

Now put the stabilizer in the frame while the lock is inserted in the inner slot of the profile. Then tighten the screws of the lock.

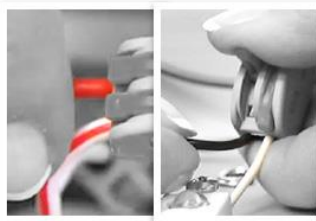
STEP 3

Connect all profiles and corners

Equip the last profile piece with the 2 left locks and put it on the 3 already mounted profiles.

STEP 4

Tighten all locks and screws

Put the frame on an even ground and tighten all screws of the locks with the allen key.

STEP 5

Connect electronic

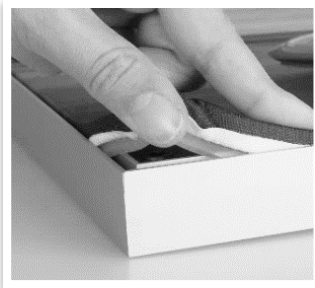
Connect the red-white cable by the Wago clip with the red cable. Connect the white cable by the Wago clip with the black cable.
(Connection: Put the cable into the clip, close the clip with the orange switch.)

STEP 6
Fix the frame to the wall

If you use a blackout textile, insert this in the back of the frame. Please find tips for this in step 6.

With wall mounts: Mount the wall mount with screws to the wall, so the frame can lie on it (angle edge to the top). You can adapt the frame height with the long hole. Also fix the frame at the bottom and the sides with the angles if necessary.

In case of using a blackout-textile, please make holes for the wallmounts into the textile.

STEP 7**Insert textile**

Insert the textile with the rubber lip into the according notch of the frame. Make sure that you hold the rubber lip right, since otherwise the textile will not fit in the frame: Fold the rubber lip slightly inwards (90°) and put it into the notch (see image).

Note regarding the wall mounting:

Depending on the wall conditions, different screws and dowels are necessary. Please check before mounting which mounting materials are suitable for you wall.